


Do not discard packaging until product has been successfully installed.

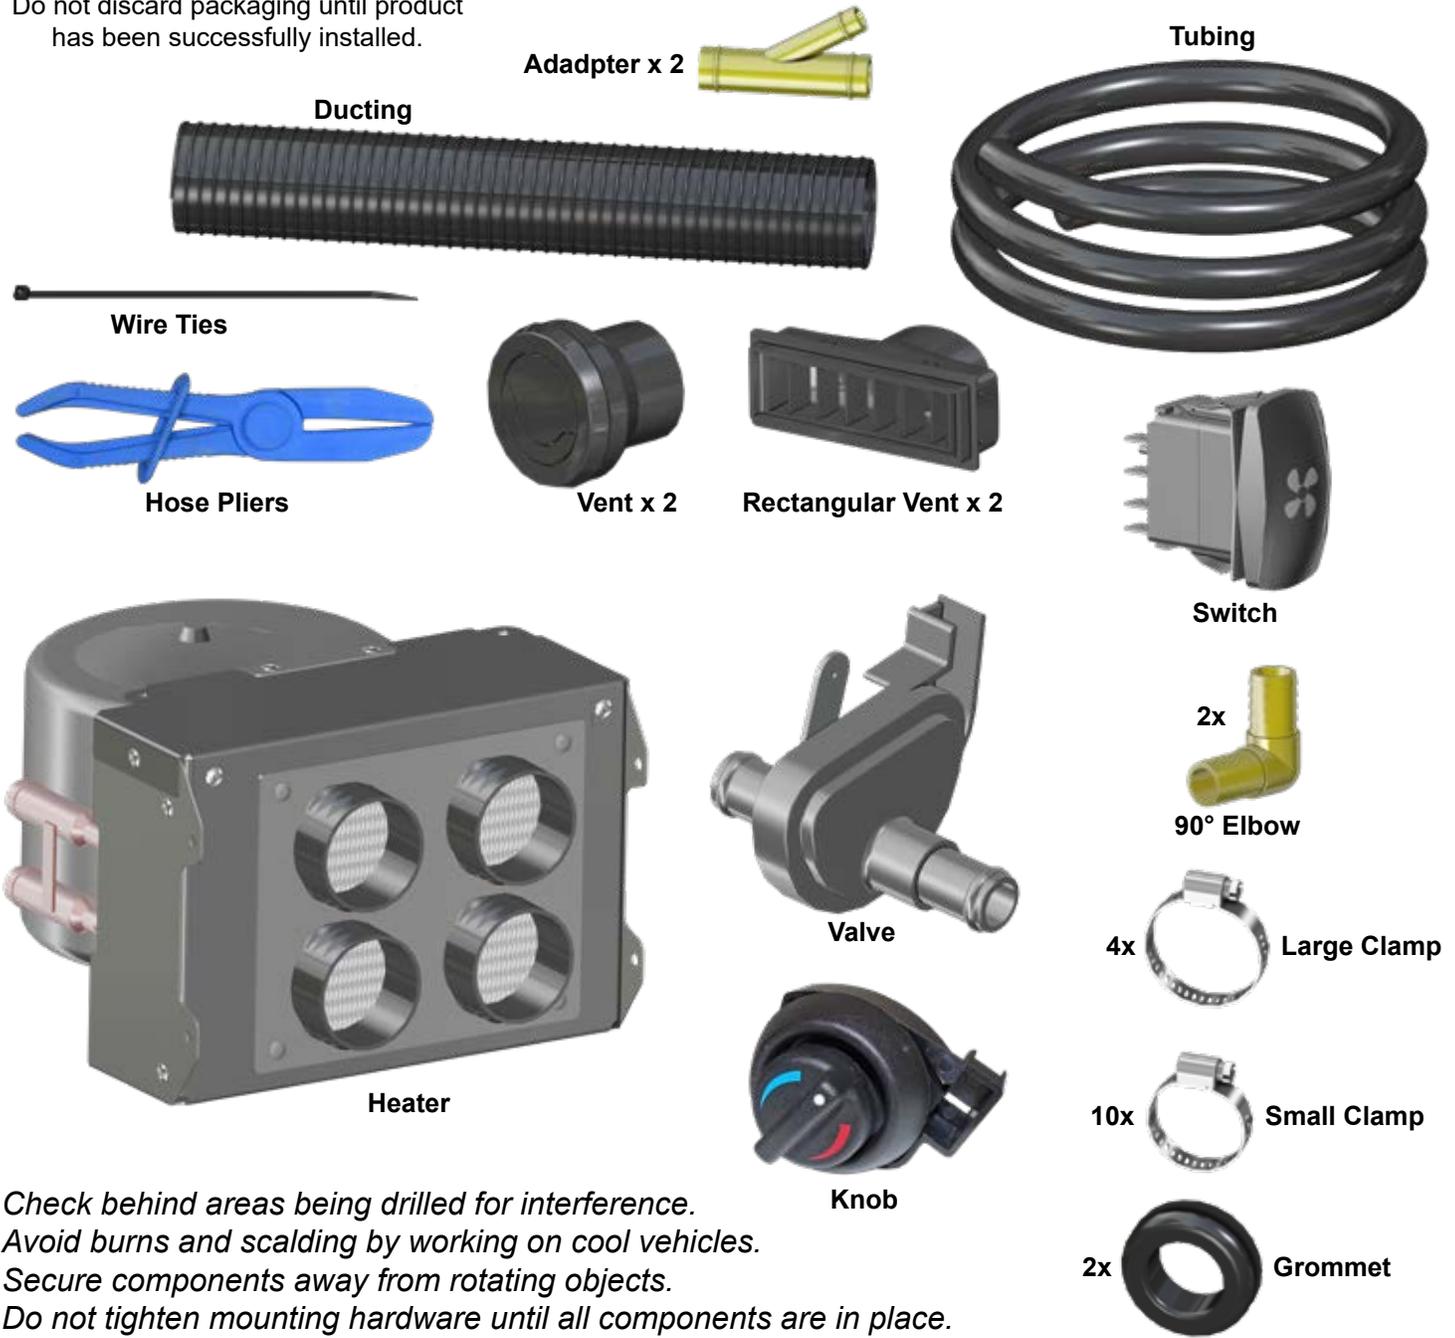

- Check behind areas being drilled for interference.
- Avoid burns and scalding by working on cool vehicles.
- Secure components away from rotating objects.
- Do not tighten mounting hardware until all components are in place.
- Use manufacturers recommended coolant.
- Avoid sharp bends when installing Tubing.
- Verify that no leaks are present after installation.

Need help with your installation?

✉ sales@superatv.com 🌐 www.superatv.com

☎ 1-855-743-3427 🕒 8:00am - 8:00pm EST M-Th
 8:00am - 7:00pm EST Friday
 9:00am - 2:00pm EST Saturday

Read instructions and view illustrations before beginning.




Thank You
 For Choosing
SUPERATV.COM[®]

Machines without stock ACC Busbar will also use this harness. Plug Power Harness into corresponding connection on Blower Harness.

RED = POS "+"

BLACK = NEG "-"

WHITE = 12V switched key-on source

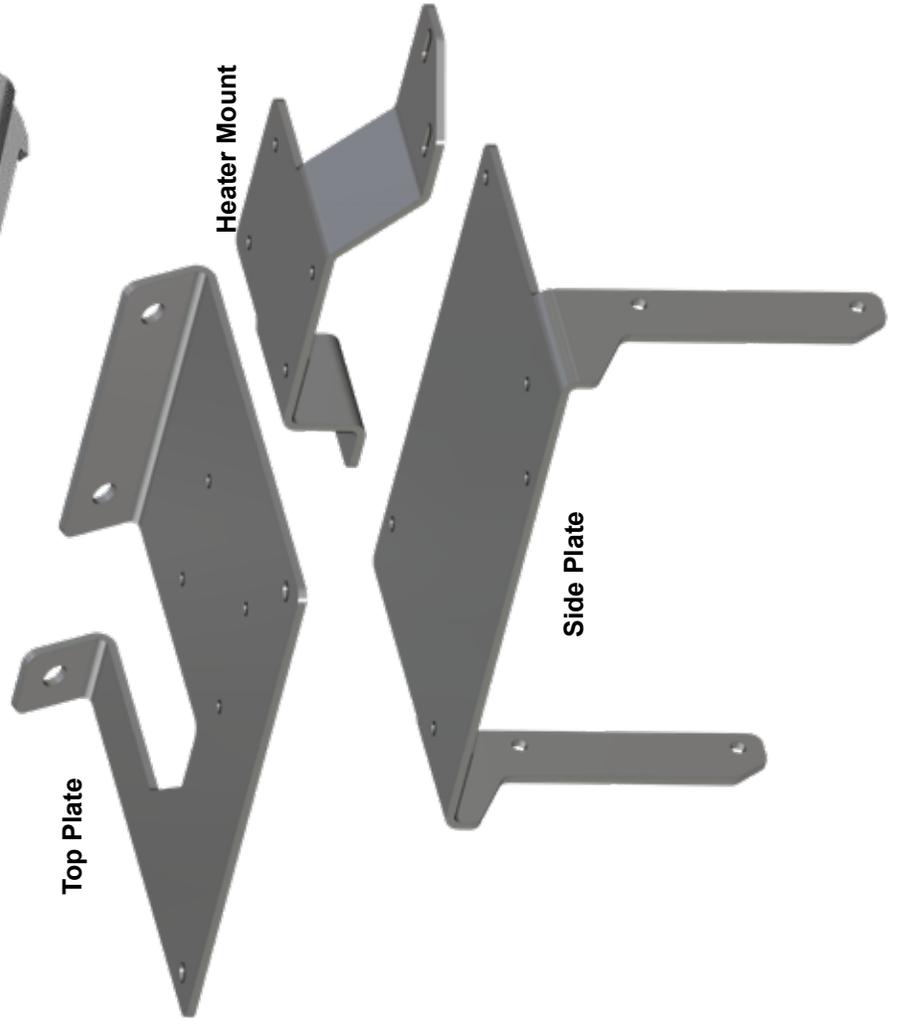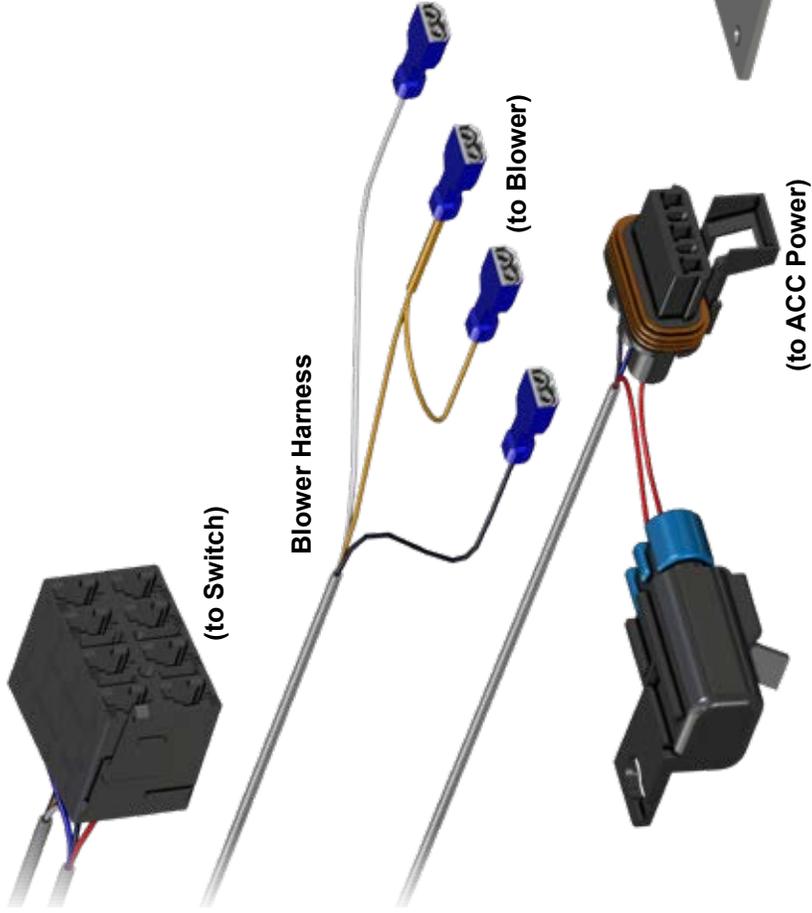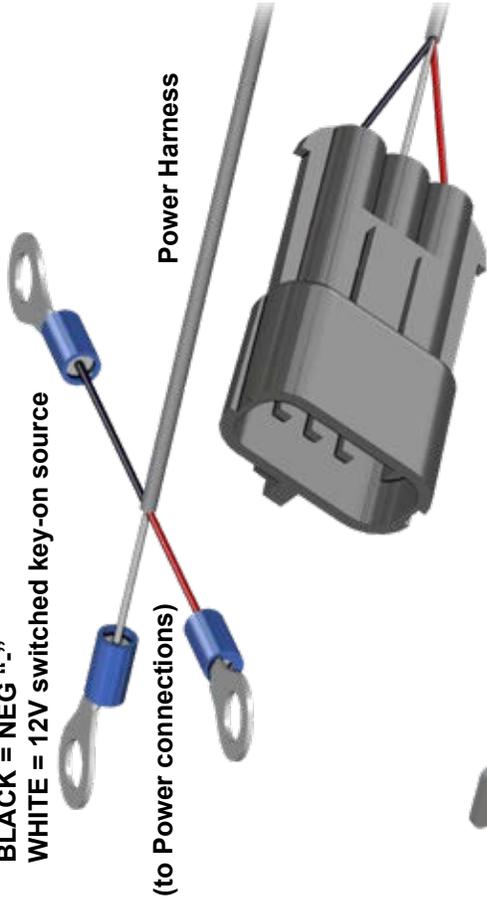

CUSTOMER NOTIFICATION AND DISCLAIMER LIABILITY

This product is a modification for utility task vehicles and all terrain vehicles. Use this product at your own risk.

Warranty and Liability Limitations. The Buyer hereby assumes all risks associated with the use and/or installation of this product. Buyer waives all liability claims against SuperATV® of any kind or nature, including, but not limited to, liability for penalties, fines, property damage, personal injury or death, to the fullest extent permitted by law. Buyer acknowledges and agrees that SuperATV® is not liable for any direct, indirect, incidental, consequential or special damages, including but not limited to, damage, loss of life, loss of property or equipment, loss of profits or revenue, injury, or claims from any individual or entity arising from the use of this product.

The warranty for this product, if any, may give you ("Buyer") specific legal rights, and Buyer may also have other rights which may vary from state to state. The installation of this product may void or otherwise adversely affect your factory warranty.

Consult your vehicle warranty before using this Product. Under no circumstances will SuperATV® be liable for the voidance of the Buyer's vehicle warranty. Buyer assumes all risk and responsibility if a manufacturer and/or dealer voids the Buyer's vehicle warranty due to use of this Product.

Safety and Laws. Operate your vehicle at all times in a safe manner. You must abide by all local, state, and federal laws, including but not limited to vehicle safety, traffic laws, and ordinances. It is your responsibility to know the laws and how they apply to you. The installation of this product may violate certain local, state, and federal laws. Be advised that laws vary depending on town, city, county, state, etc. Use of this product on public streets, roads, or highways may be in violation law. The Buyer is solely and exclusively legally and personally responsible for any violation of the law by the installation or use of this product. In no case will SuperATV® be held liable if Buyer violates the law or uses the product in an unsafe manner.


The Buyer is responsible to fully understand the capability and limitations of his/her vehicle according to manufacturer specifications, warnings and instructions and agrees to hold SuperATV® harmless from any damage resulting from failure to adhere to such specifications, warnings and/ or instructions. The Buyer is also responsible to obey all applicable federal, state, and local laws when operating his/her vehicle while using this product, and the Buyer agrees to hold SuperATV® harmless from any violation thereof.

Installation. The installation of this product on your vehicle indicates that you have had the opportunity to inquire about applicable local, state, and federal laws and ordinances and that you have read and understand, and accept all of the terms of, this Disclaimer.


SuperATV® shall not be responsible for the proper installation, use, and service of this product. Rather, the Buyer shall be solely responsible for the installation of the product and any damage that may be done to the vehicle or vehicle components as a result of modifications made by the Buyer.




Use provided hardware shown to secure components.

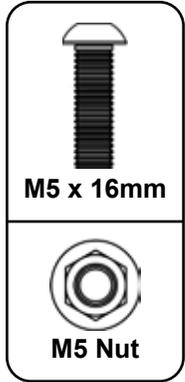


Install Side Plate to Heater.

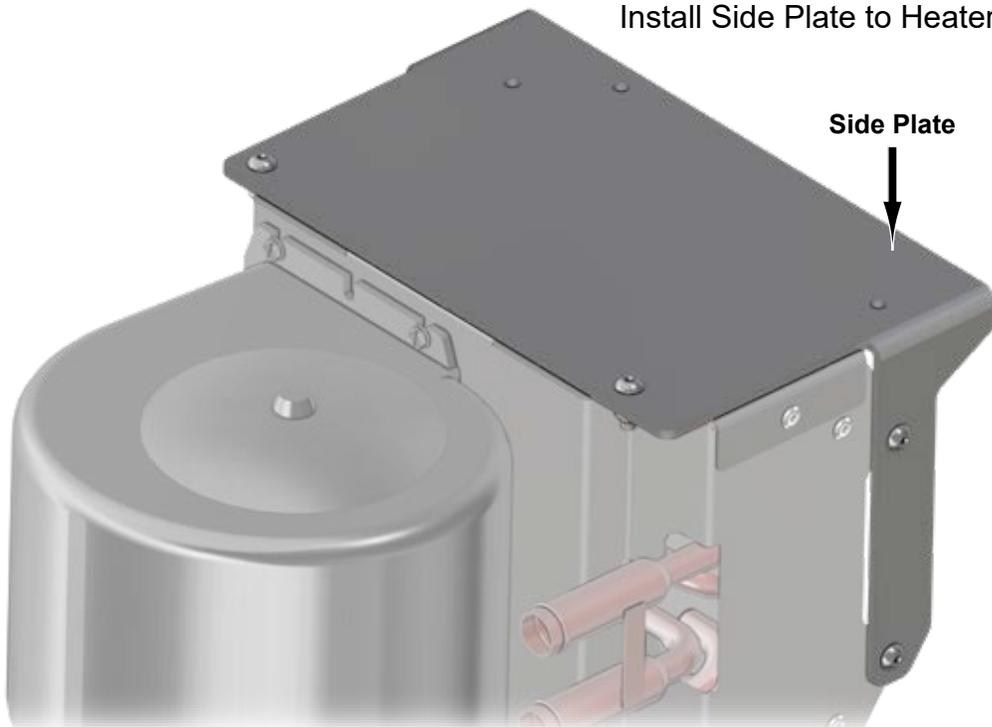


Install Heater Mount to Side Plate.

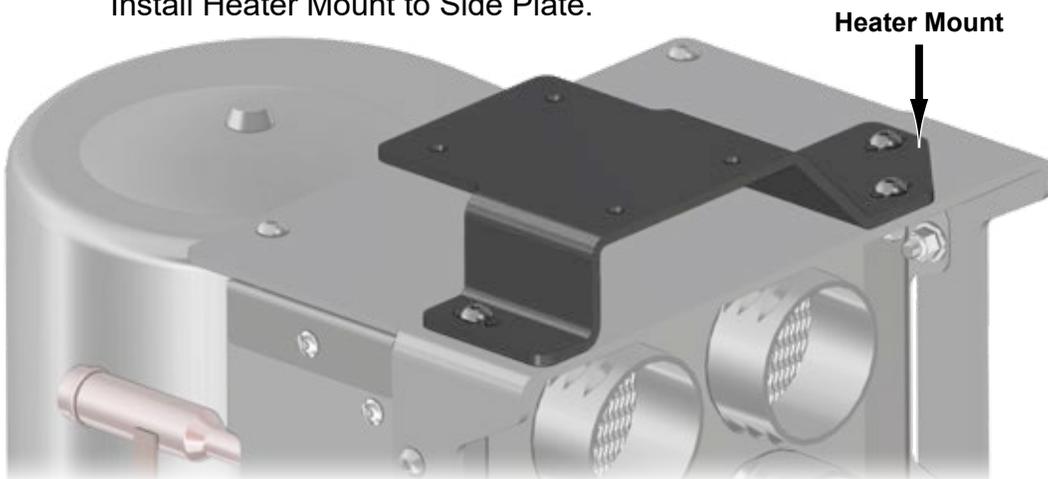

Install Top Plate to Heater Mount.

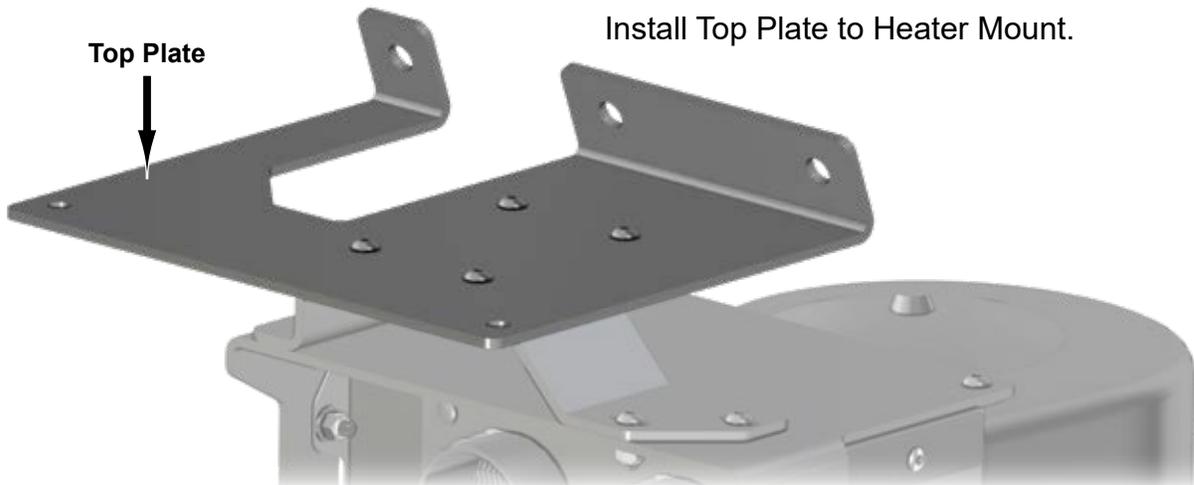


Tighten all hardware.

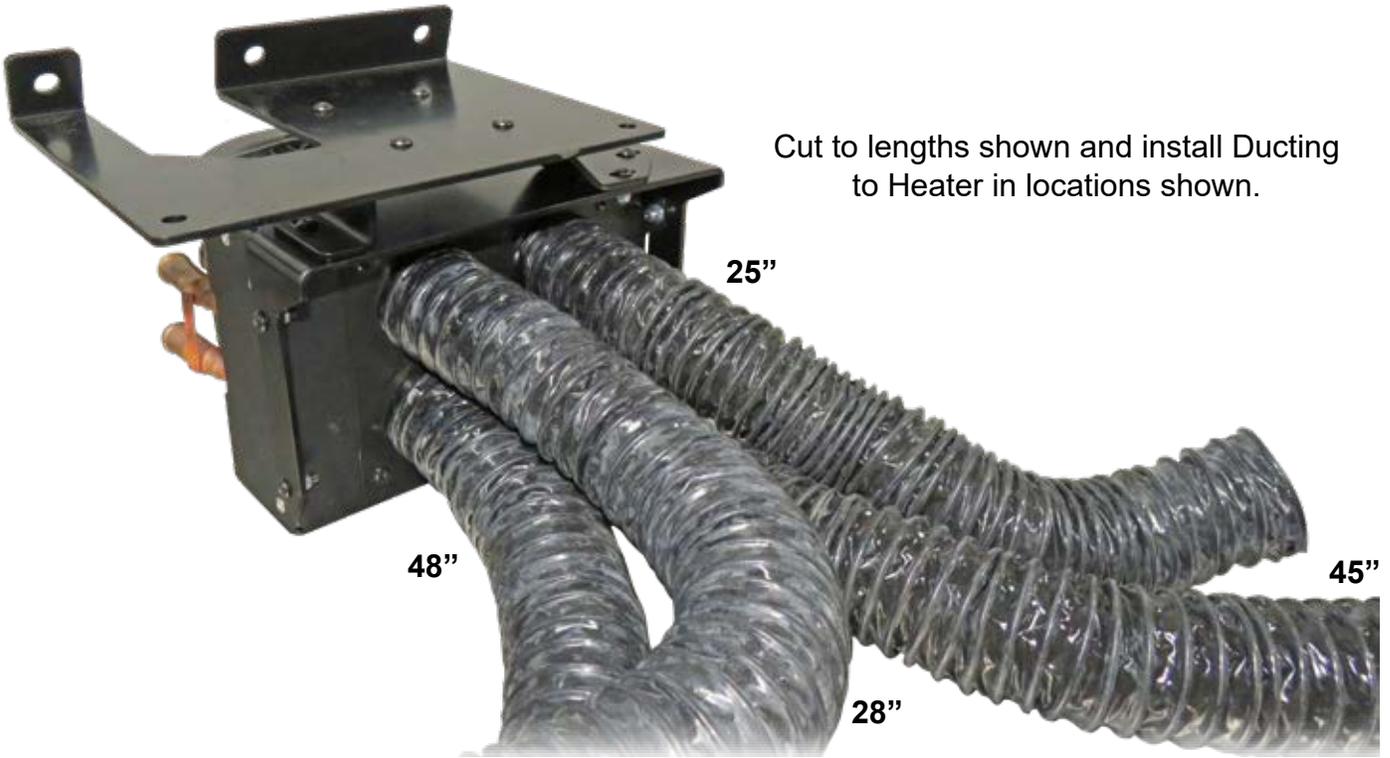



If a harness is attached to Blower, remove and discard it before attaching provided Blower Harness.

- Connect Blower Harness to Blower.


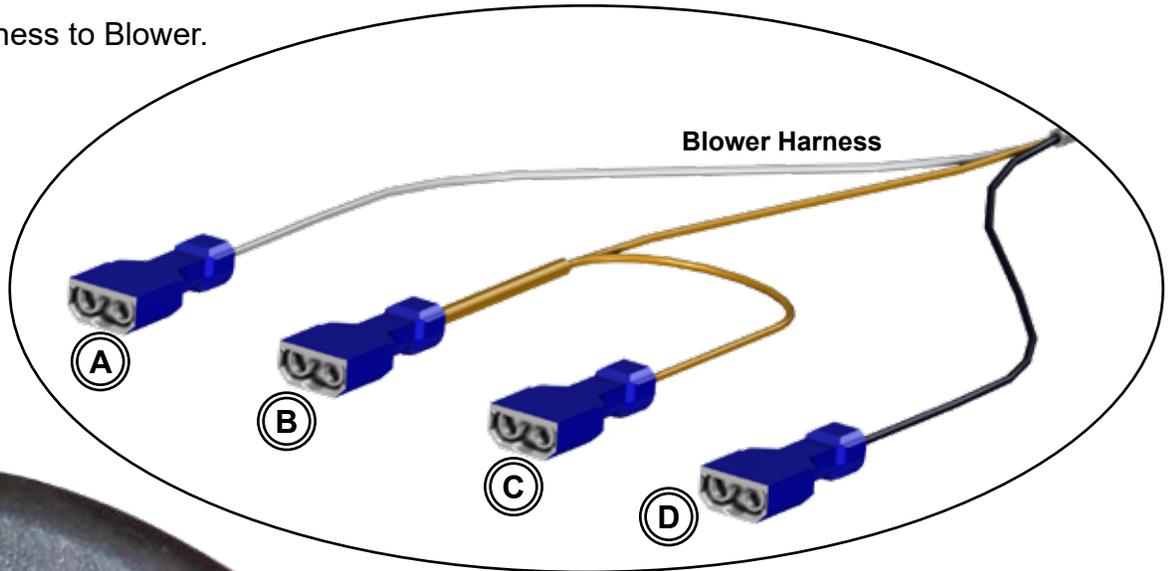




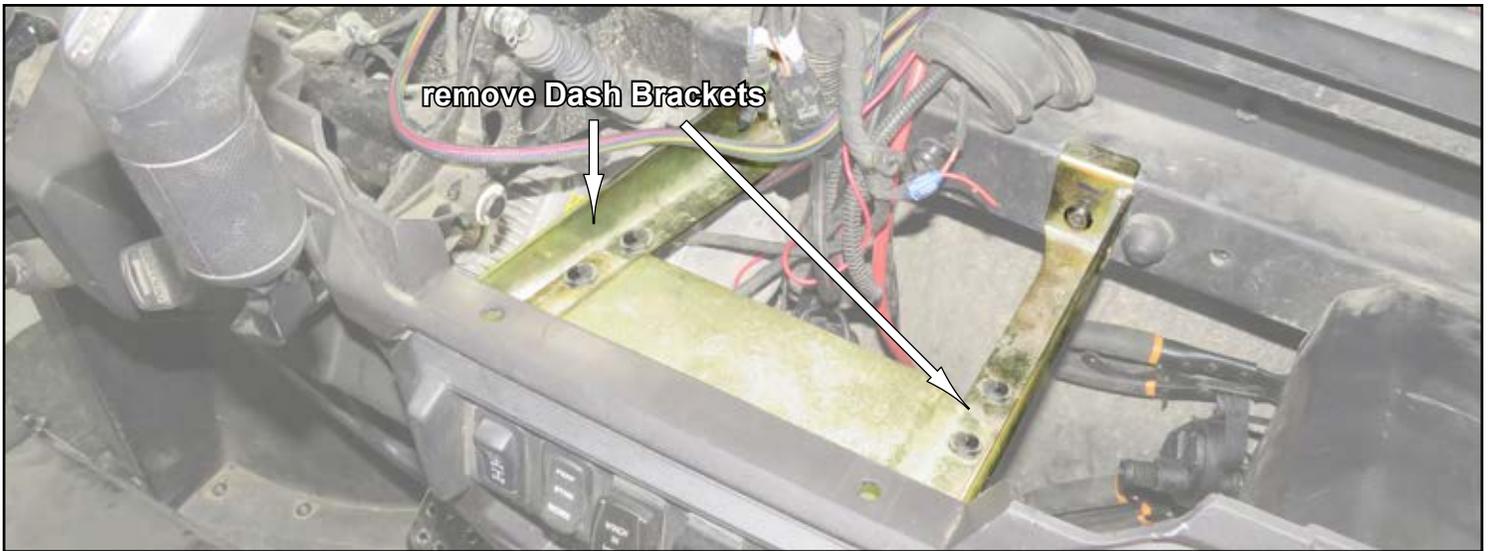


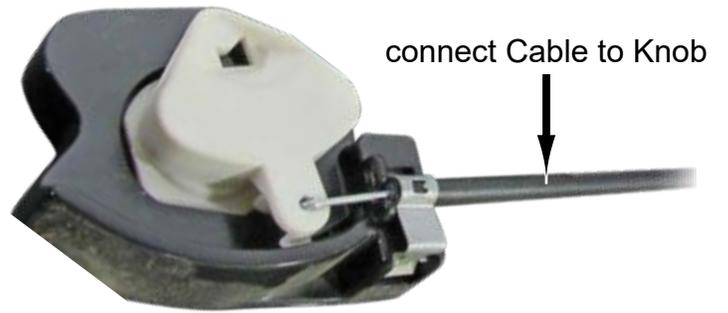


Use a paint marker and mark areas shown.

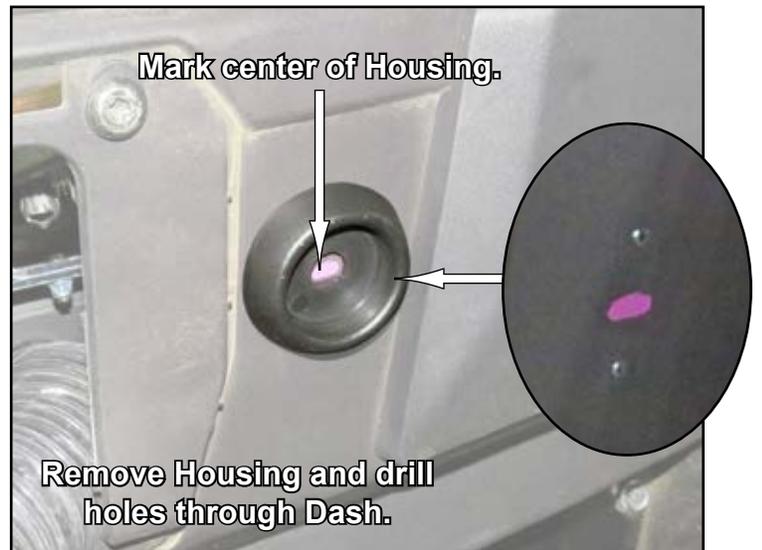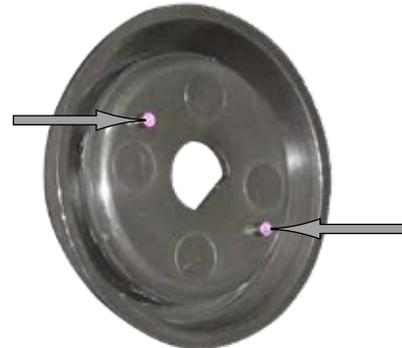

- Locate stock Vent outlines on Dash. Highlight with a marker.

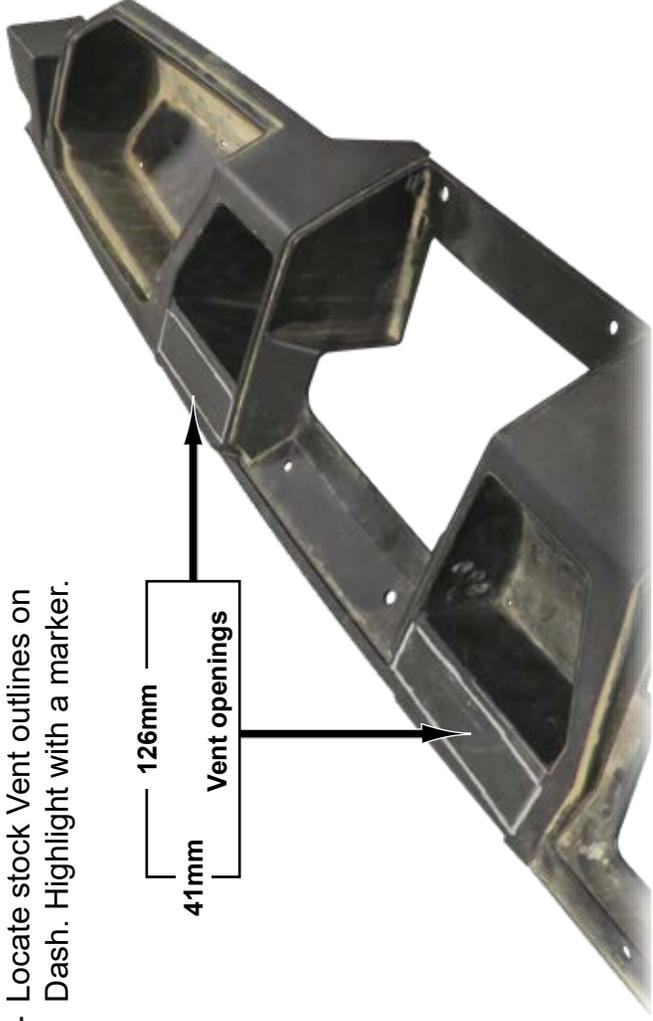

- Separate Vent, center in location shown and mark outline onto Dash.
- Repeat for opposite end.
- Do not reassemble Vents.

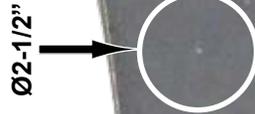

- Follow new markings on Dash and create cutouts.







Remove stock Knockout and route Harness through.

Connect Harness to Switch. Secure Switch.


- Route end of Harness shown through stock Grommet in Firewall and connect to ACC power.

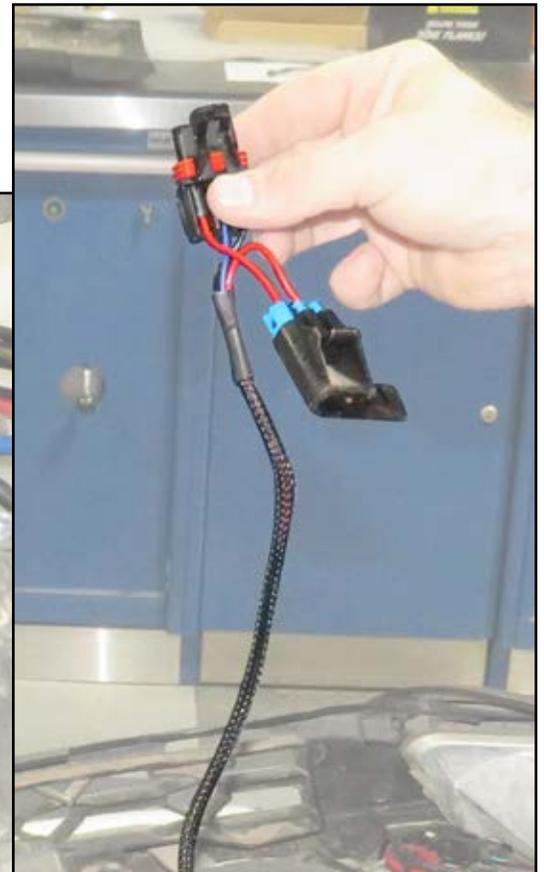

- Locate stock marking on Firewall and mark a centerline in area shown.
- Use a $\text{Ø}1\text{-}1/4\text{'}$ Hole Saw to make hole.

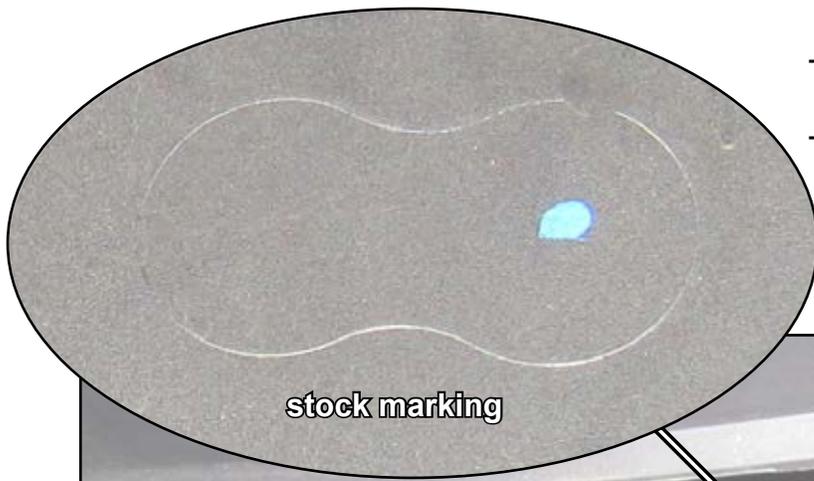

- Mark a centerline as shown in below illustration.
- Use a $\text{Ø}1\text{-}1/4\text{'}$ Hole Saw to make hole.

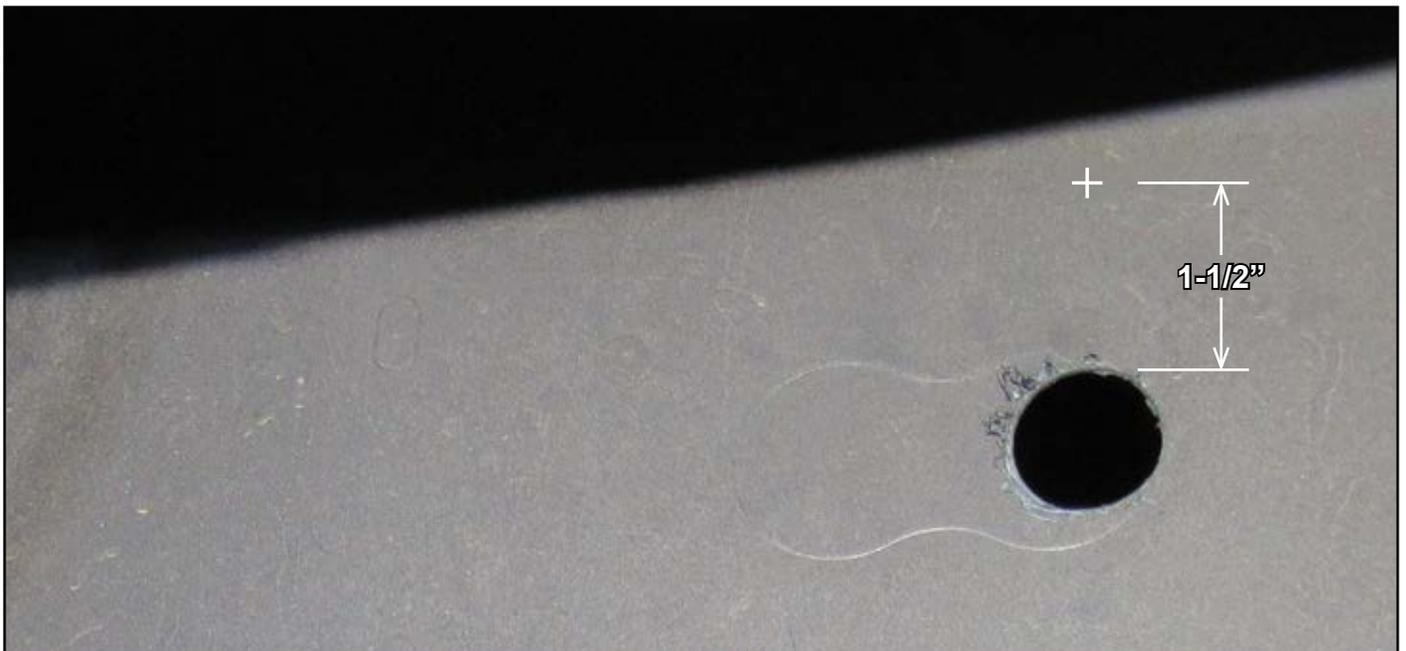



install Grommets




(inside passenger Wheel Well)


Plumbing Reference

See following pages for installation illustrations.


(Tubing, components, and locations have no scale)

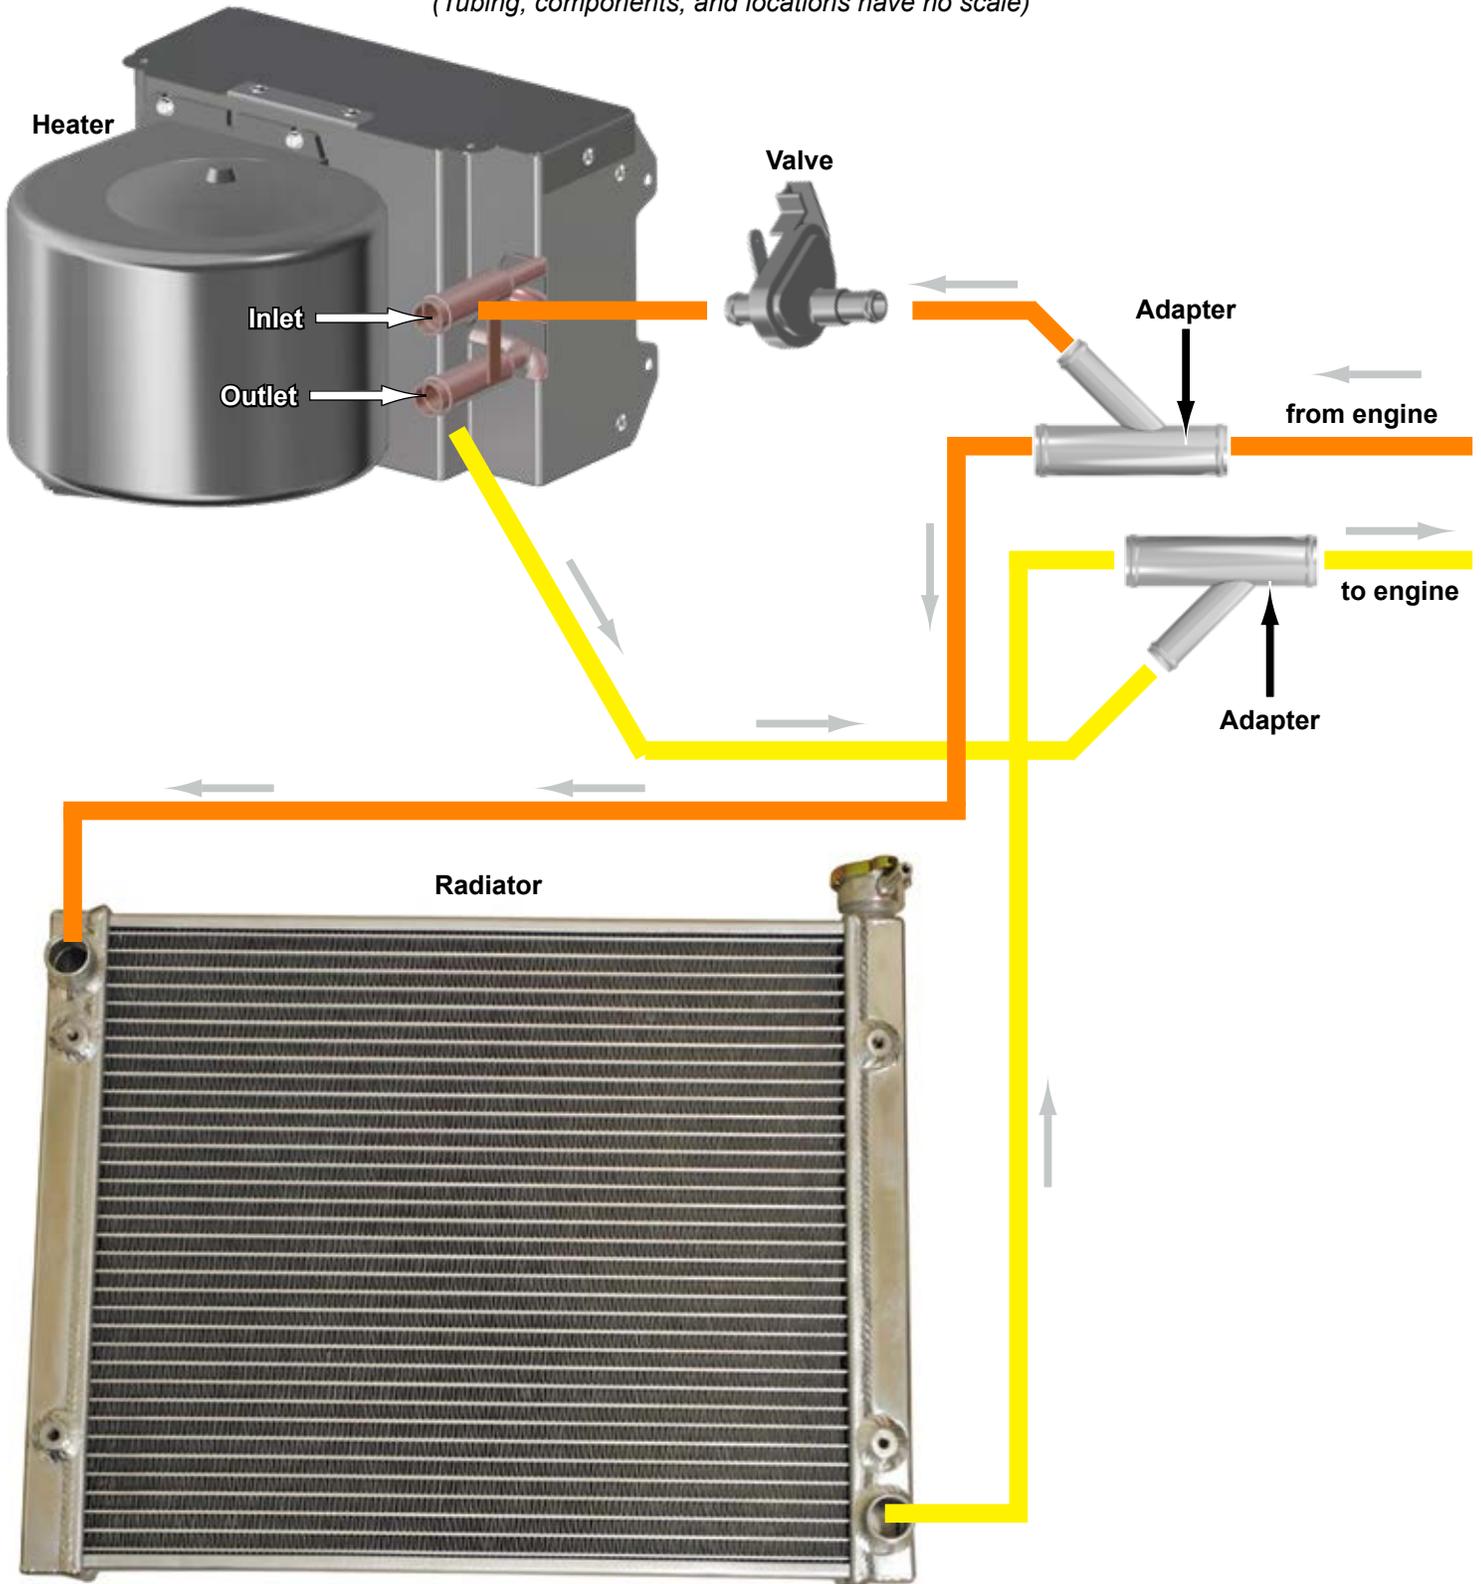


To prevent stock Radiator Hoses from being cut short, use provided Adapters as templates.

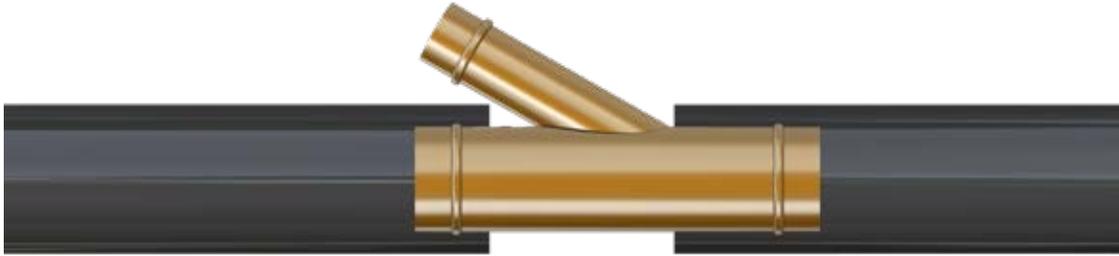


- Mark locations to be cut.
- Cut Hose and install Adapter.
- Secure with provided Large Clamps; tighten.

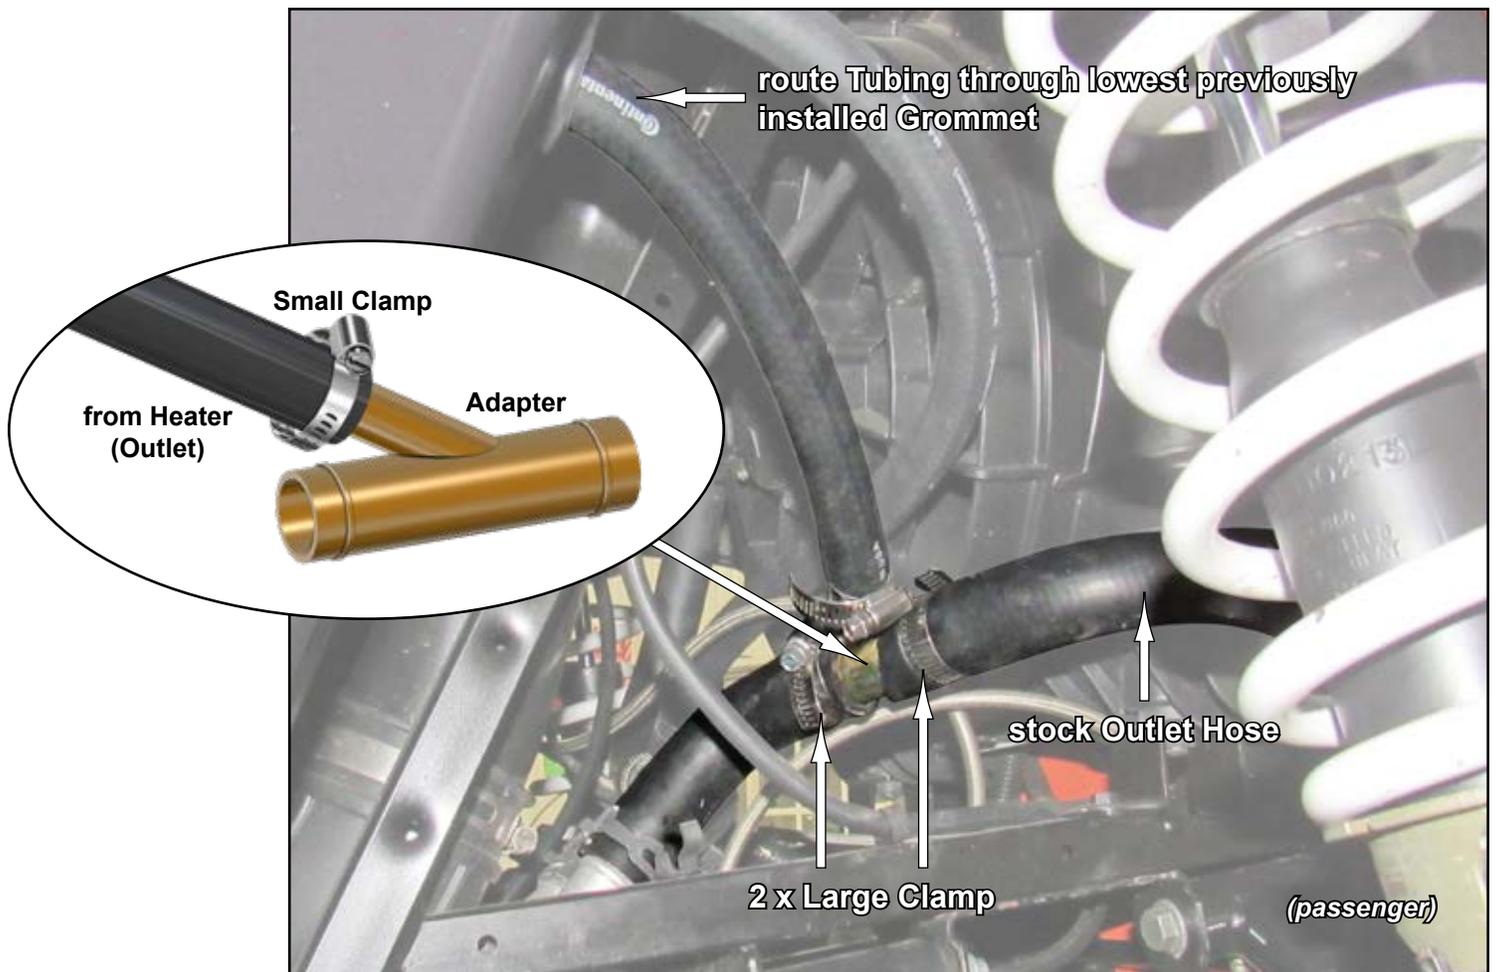

- Mark locations to be cut.
- Cut Hose and install Adapter.
- Secure with provided Large Clamps; tighten.

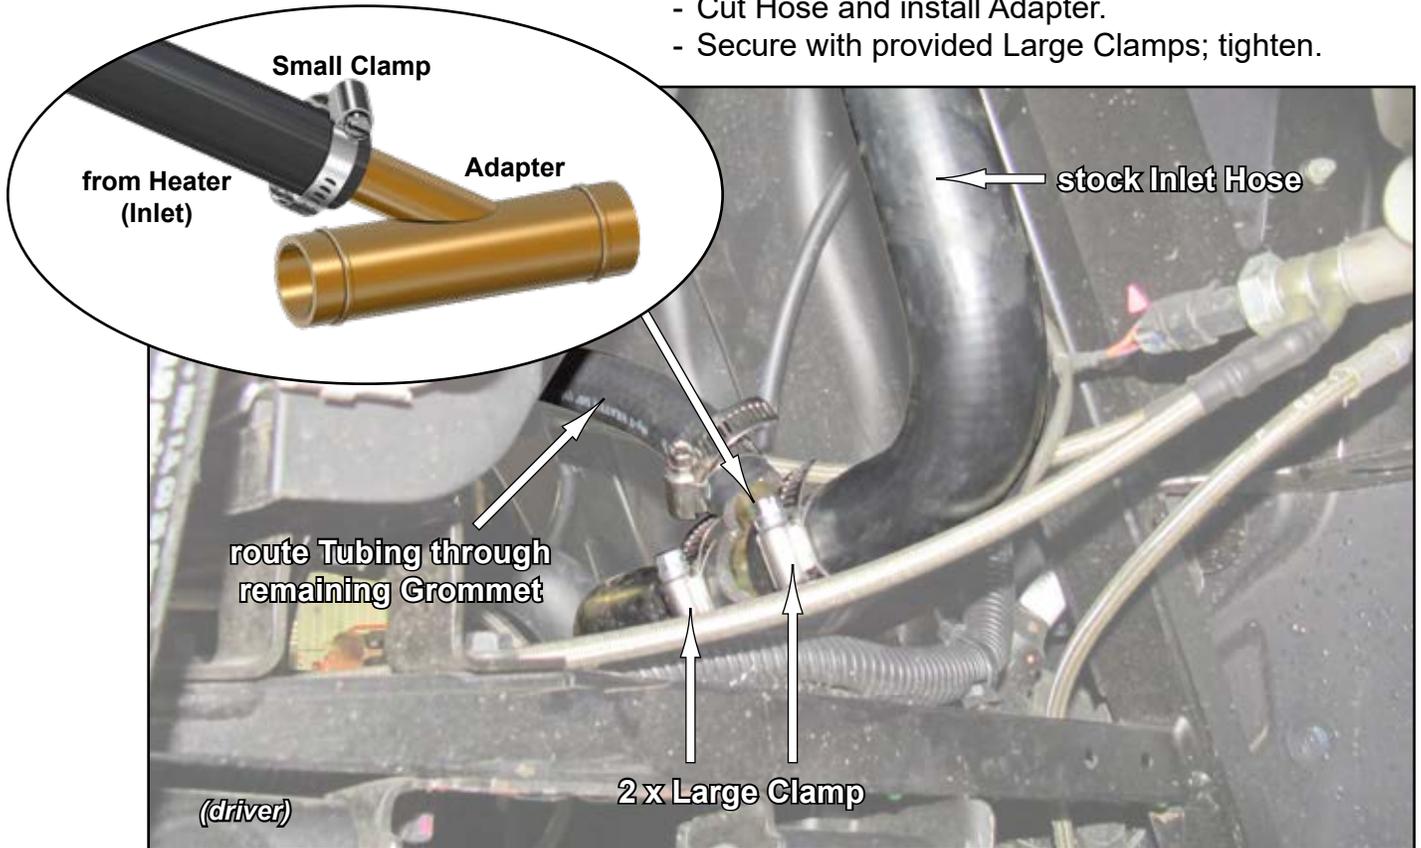


- Cut Tubing so that approximately 2" protrudes from Grommets.
- Install Elbows to Tubing with Small Clamps; tighten.
- Cut (1) piece of Tubing approximately 2" and connect to upper Elbow. Secure with Small Clamp; tighten.
- Install Valve to new piece of Tubing and secure with Small Clamp; tighten.

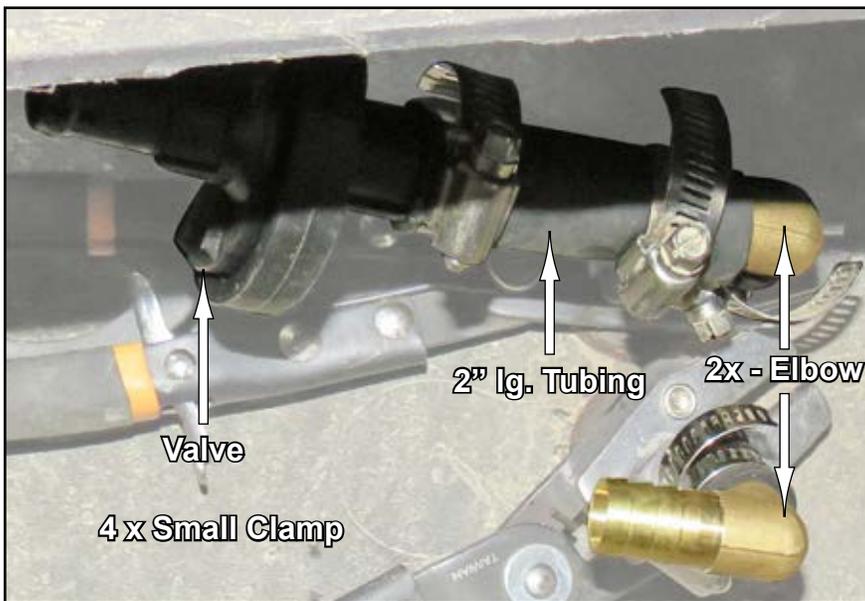

- Connect Cable from Knob to Valve.




Place Heater assembly into position and location shown.

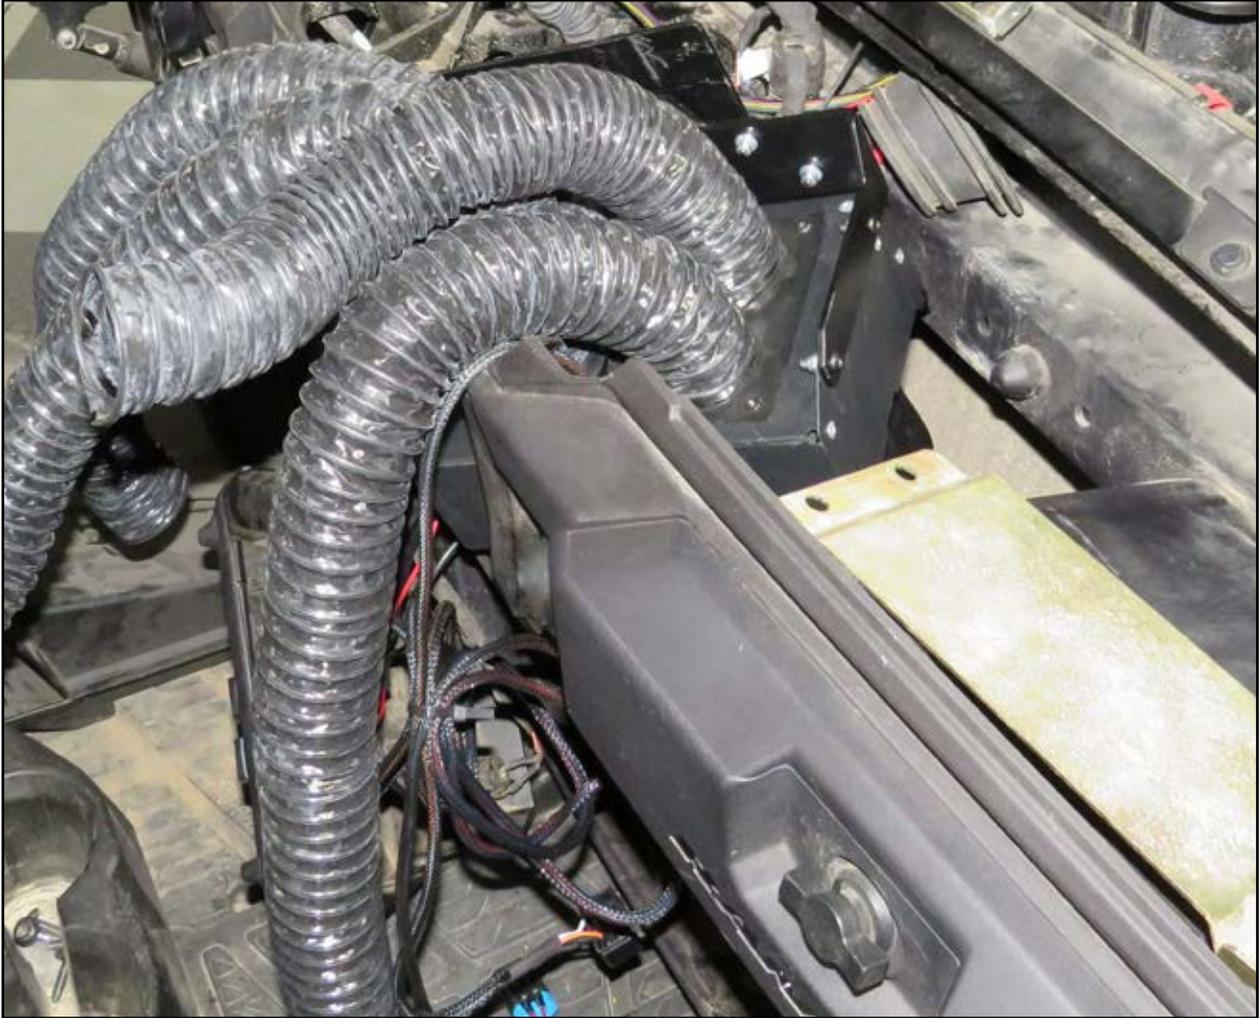



Connect Tubing from Heater to Elbow and Valve with Small Clamps; tighten.



Secure Top Plate, on Heater assembly, and Dash Brackets to machine with stock hardware; tighten.

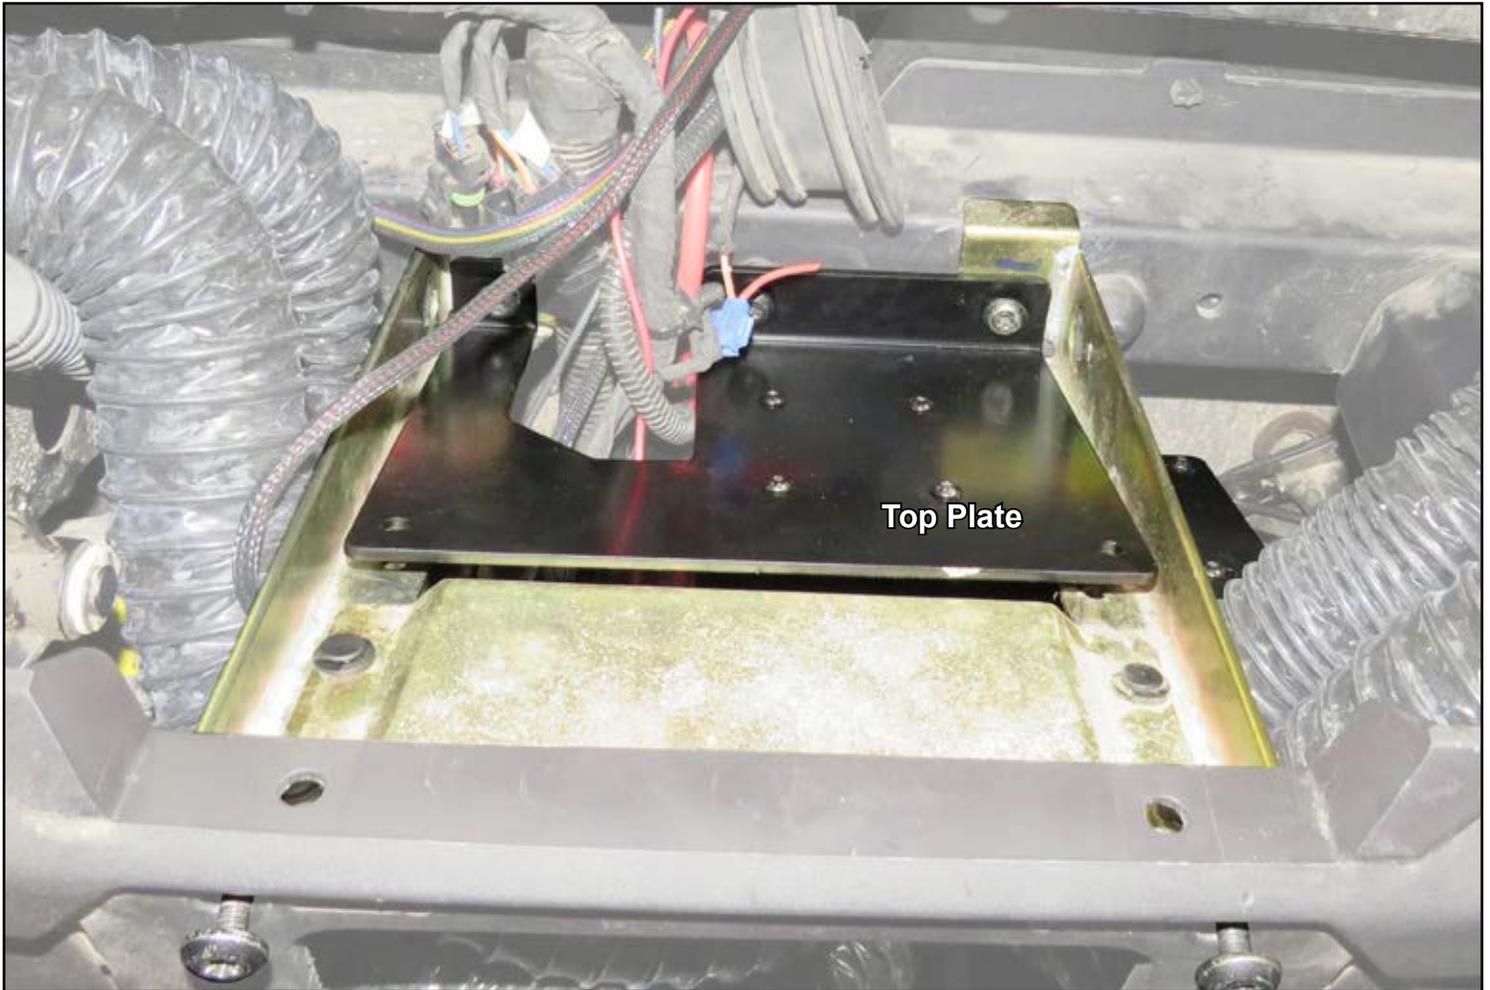


Secure Top Plate to Dash Brackets with hardware shown; tighten.

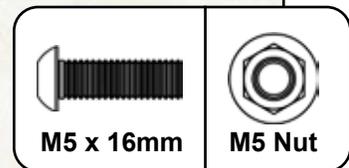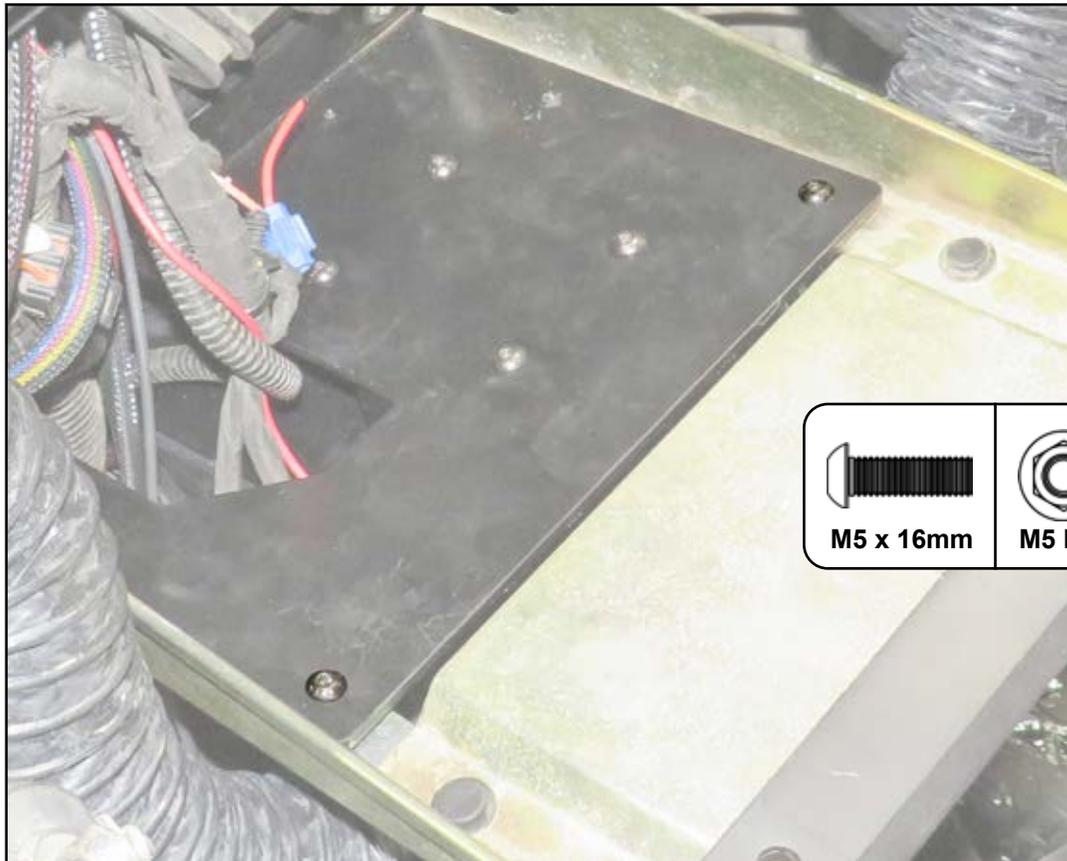

Place Dash back onto machine. Do not completely reinstall at this time.

- Route Ducting up through Dash and attach Rectangle Vent as shown.
- Secure Rectangle Vent in previously created opening in Dash.
- Repeat for remaining Rectangle Vent.

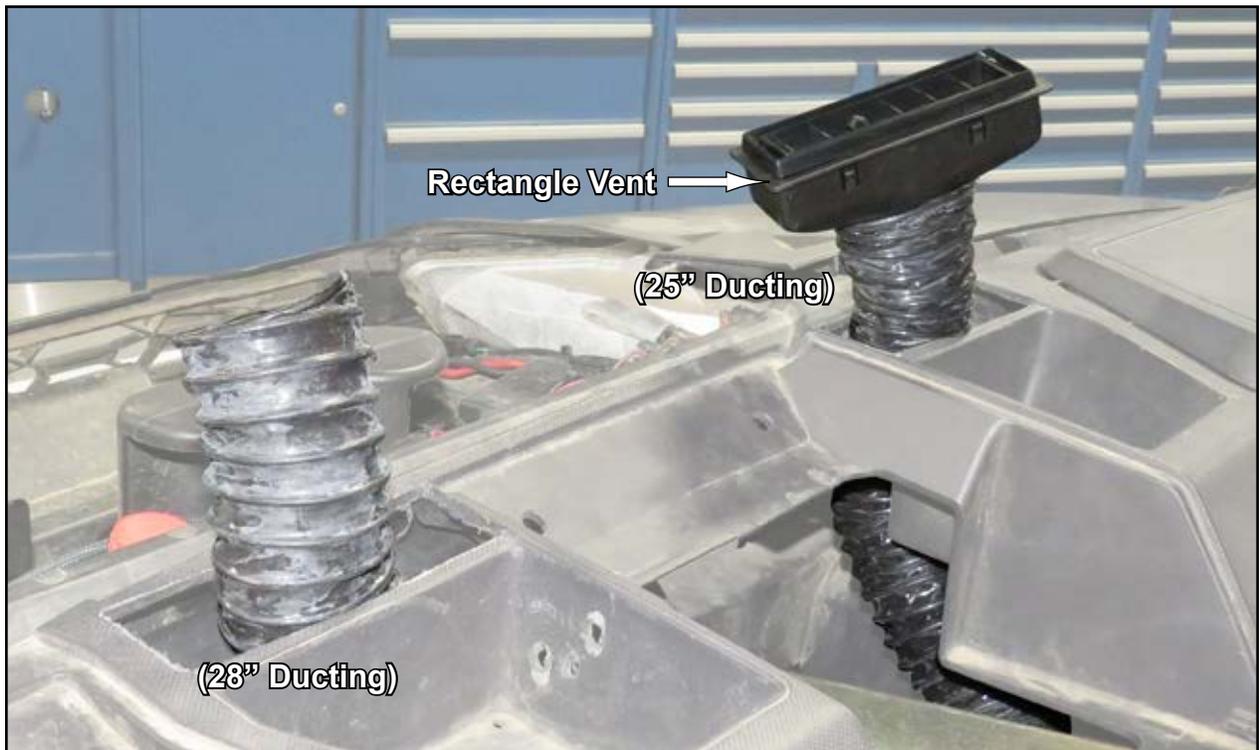

- Route Ducting over to previously created opening in Dash and attach Vent as shown.
- Repeat for opposite Vent.



Secure Dash and reinstall all previously removed stock components at this time.

- Fill coolant level to manufacturers recommended setting.
- Start machine and run at 3000 RPM until engine is hot.
- Use provided Hose Pliers and pinch off Inlet Hose as shown below.



- Remove Hose Pliers after Radiator Fan turns ON.
- After Radiator Fan turns OFF, pinch Inlet Hose again and remove after Radiator Fan turns ON.
- Turn machine off and let engine completely cool; may take several hours.
- Check Coolant Level in Radiator and Reservoir; adjust as needed.
- Start machine and repeat “pinch” steps again.