

RGB LED Guide



- Device must be Bluetooth capable and Bluetooth must be turned on to control LED's.

App install method:

Scan QR code on Control Box.



Before contacting customer service, review possible problems:

- Verify that Fuse is not blown.
- Ensure that all connections, including power, are secure and connected.

When done operating, Bluetooth connection must be disconnected.

After 2 hours, lights will enter "sleep mode"; reset to continue useage.

Need help with your installation?



sales@superatv.com



www.superatv.com



1-855-743-3427



8:00am - 8:00pm EST M-Th
8:00am - 7:00pm EST Friday
9:00am - 2:00pm EST Saturday


Read instructions and view illustrations before beginning.



Thank You

For Choosing

SUPERATV.COM®


- Separate Base and remove hardware.
- Secure Base to Mount (not included) with previously removed hardware; tighten.
- Reinstall LED to Base.
- See following pages and wire components.

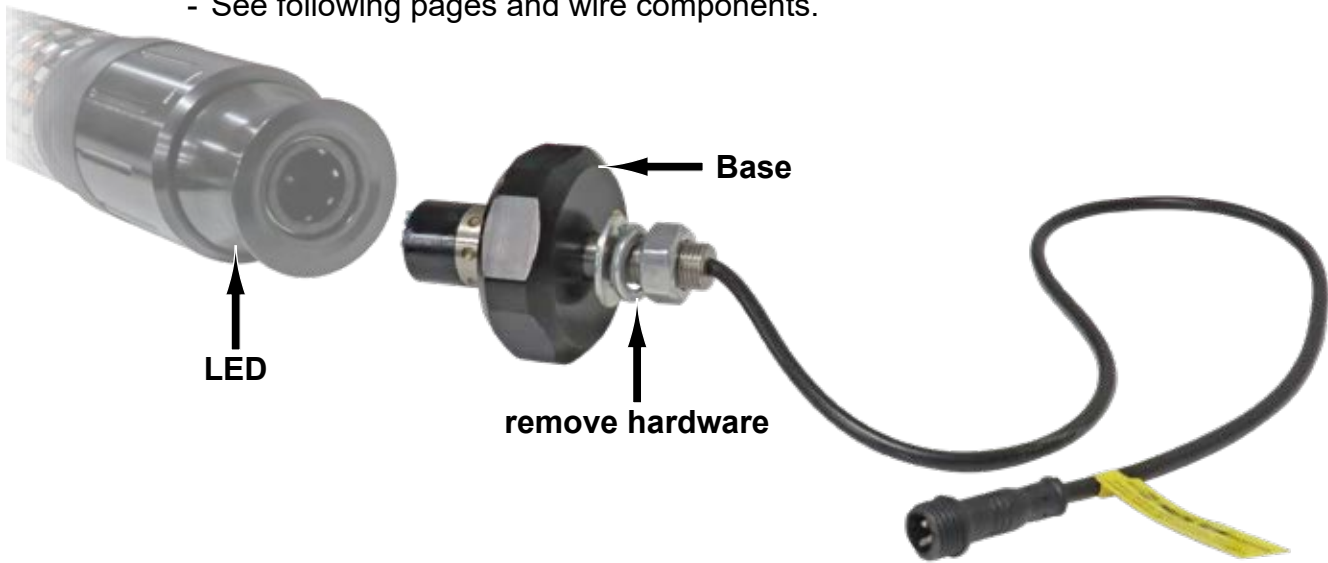

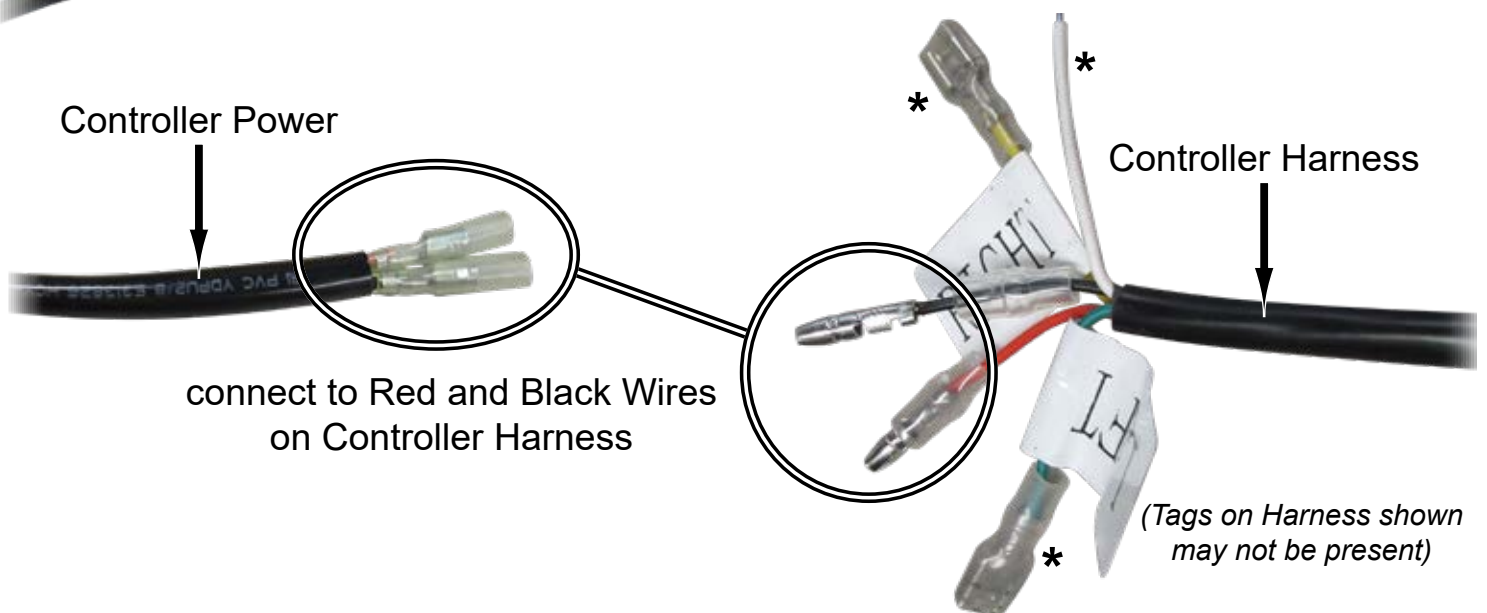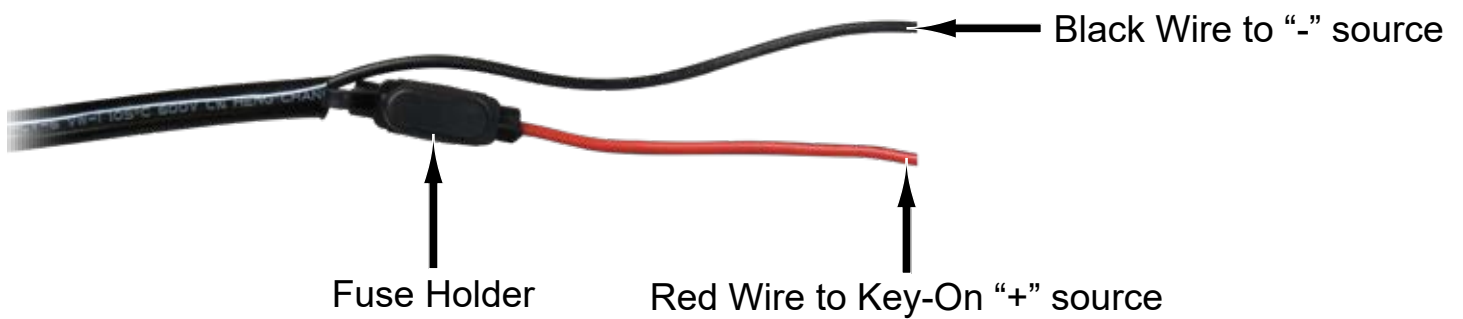



Turn Signal or Brake Light Wiring (optional)

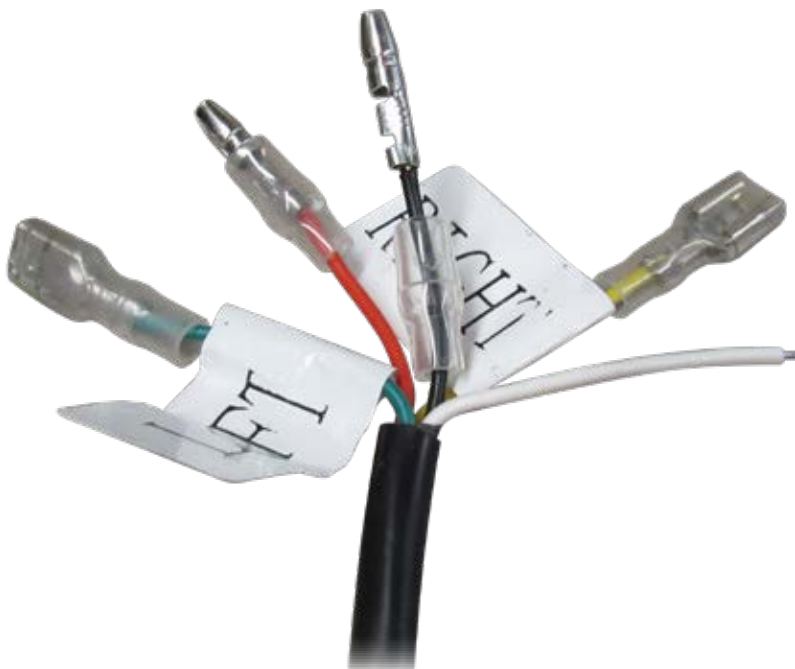

| Color | Description |
|--------|-------------------|
| Yellow | Right Turn Signal |
| Green | Left Turn Signal |
| White | Brake Light |

Liability Statement

SuperATV's® products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by SuperATV® and is not recommended. SuperATV's® products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV® to verify that they will work together.

Although SuperATV® has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV® urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV® products, user agrees that should damages occur, SuperATV® will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV®, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV®. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV® will warranty only parts provided by SuperATV®. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by SuperATV®. SuperATV® parts and products are not warrantied if item was not installed properly, misused, or modified.

Installing, adding, modifying, or fabricating any factory or aftermarket product to your ATV/UTV may violate certain local, state, and federal laws. Be advised that laws vary depending on town, city, county, state, etc. Use of certain products on public streets, roads, or highways may be in violation law. The Buyer is solely and exclusively legally and personally responsible for any violation of the law by the installation or use of the product. You must abide by all local, state, and federal laws, including but not limited to vehicle safety, traffic laws, and ordinances. It is your responsibility to know the laws and how they apply to you.

The Buyer is responsible to fully understand the capability and limitations of his/her vehicle according to manufacturer specifications, warnings and instructions and agrees to hold SuperATV® harmless from any damage resulting from failure to adhere to such specifications, warnings and/ or instructions. The Buyer is also responsible to obey all applicable federal, state, and local laws and ordinances when operating his/her vehicle while using this product, and the Buyer agrees to hold SuperATV® harmless from any violation thereof.

PRO RGB App Details

RF Remote Control

| Button | Function |
|----------|---|
| On | turn lighting on |
| AUTO | activate demo mode |
| Off | turn lighting off |
| SPEED + | increase mode speed |
| MODE + | switch to next mode |
| BRIGHT + | increase lighting brightness |
| SPEED - | decrease mode speed |
| MODE - | switch to previous mode |
| BRIGHT - | decrease lighting brightness |
| Purple | press and hold for 5 seconds to lock remote control |
| White | press and hold for 5 seconds to unlock remote control |
| Colors | press to display correspondong light color |



Liability Statement

SuperATV's® products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by SuperATV® and is not recommended. SuperATV's® products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV® to verify that they will work together.

Although SuperATV® has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV® urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV® products, user agrees that should damages occur, SuperATV® will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV®, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV®. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV® will warranty only parts provided by SuperATV®. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by SuperATV®. SuperATV® parts and products are not warrantied if item was not installed properly, misused, or modified.

Installing, adding, modifying, or fabricating any factory or aftermarket product to your ATV/UTV may violate certain local, state, and federal laws. Be advised that laws vary depending on town, city, county, state, etc. Use of certain products on public streets, roads, or highways may be in violation law. The Buyer is solely and exclusively legally and personally responsible for any violation of the law by the installation or use of the product. You must abide by all local, state, and federal laws, including but not limited to vehicle safety, traffic laws, and ordinances. It is your responsibility to know the laws and how they apply to you.

The Buyer is responsible to fully understand the capability and limitations of his/her vehicle according to manufacturer specifications, warnings and instructions and agrees to hold SuperATV® harmless from any damage resulting from failure to adhere to such specifications, warnings and/ or instructions. The Buyer is also responsible to obey all applicable federal, state, and local laws and ordinances when operating his/her vehicle while using this product, and the Buyer agrees to hold SuperATV® harmless from any violation thereof.

Need help with your installation?



sales@superatv.com



www.superatv.com



1-855-743-3427




8:00am - 8:00pm EST M-Th
8:00am - 7:00pm EST Friday
9:00am - 2:00pm EST Saturday


Read instructions and view illustrations before beginning.

Thank You


For Choosing


SUPERATV.COM[®]

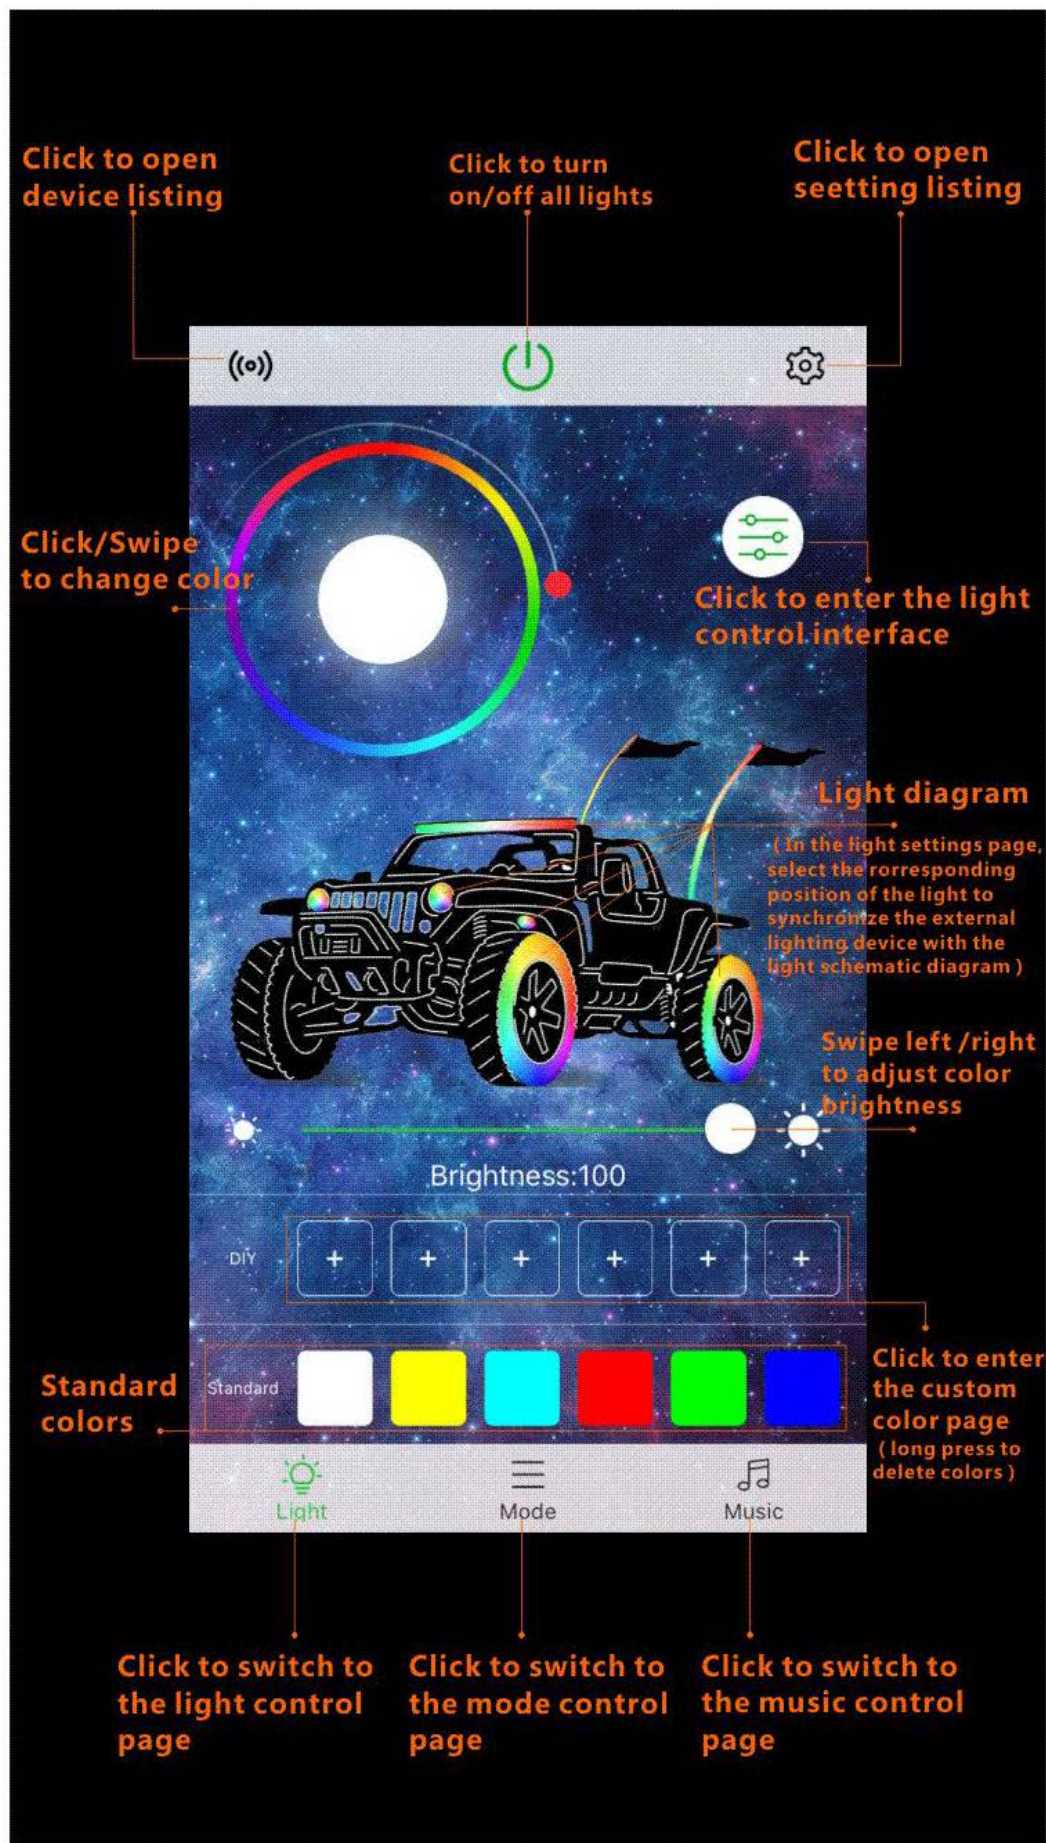


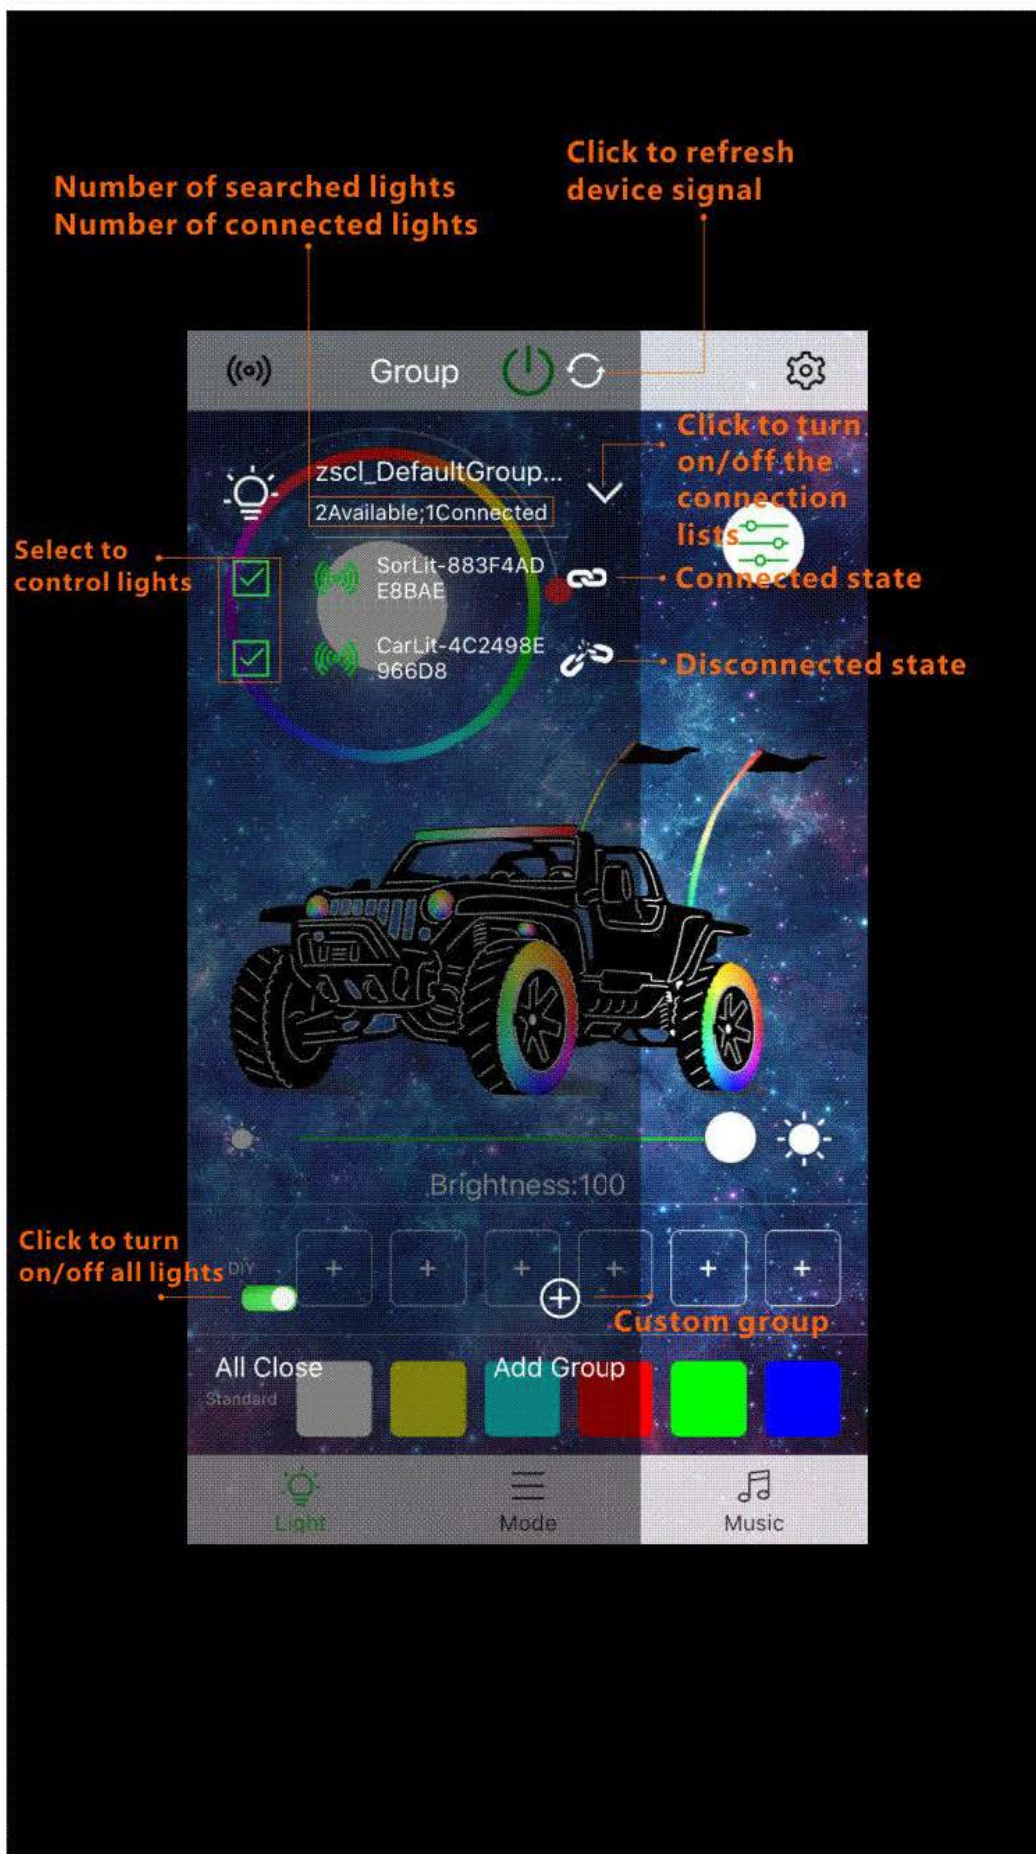



Click to enter the device
color and pixel setting page

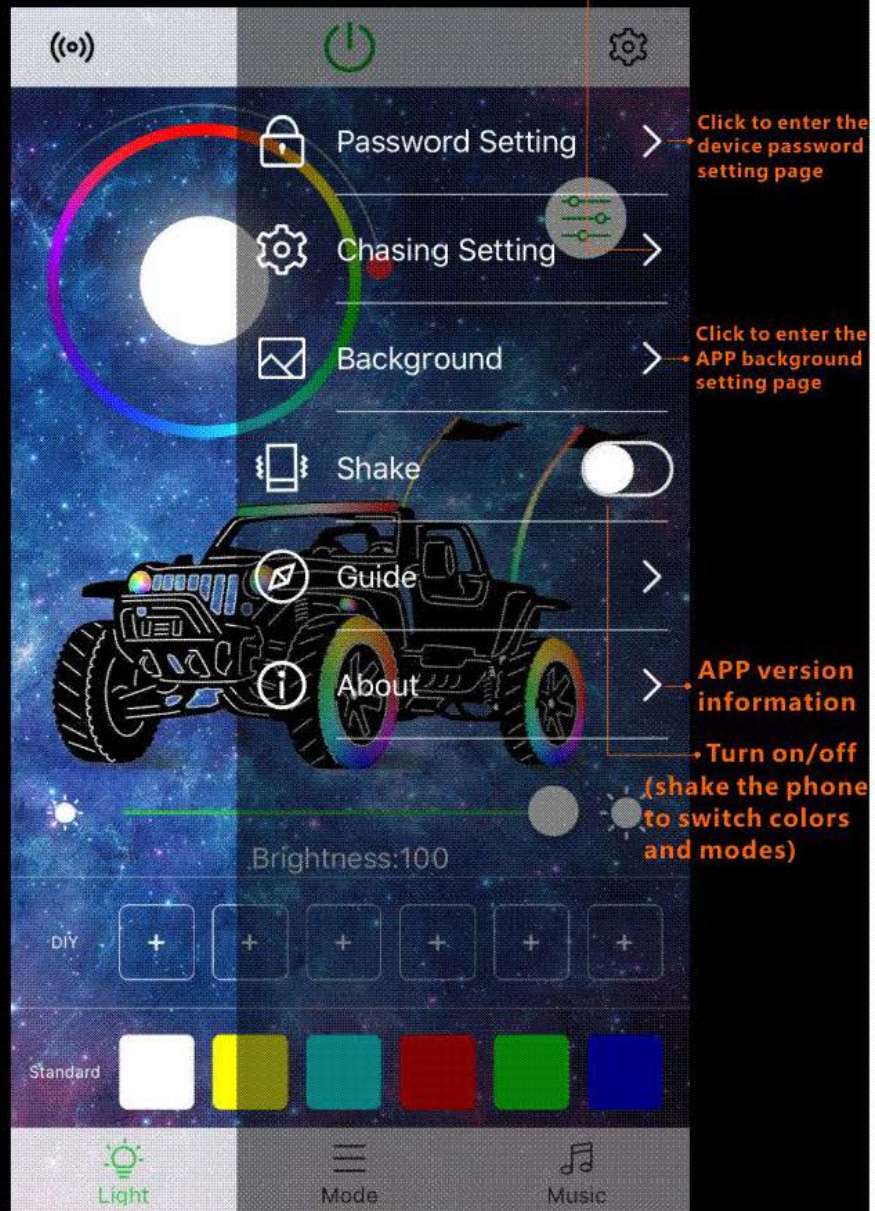


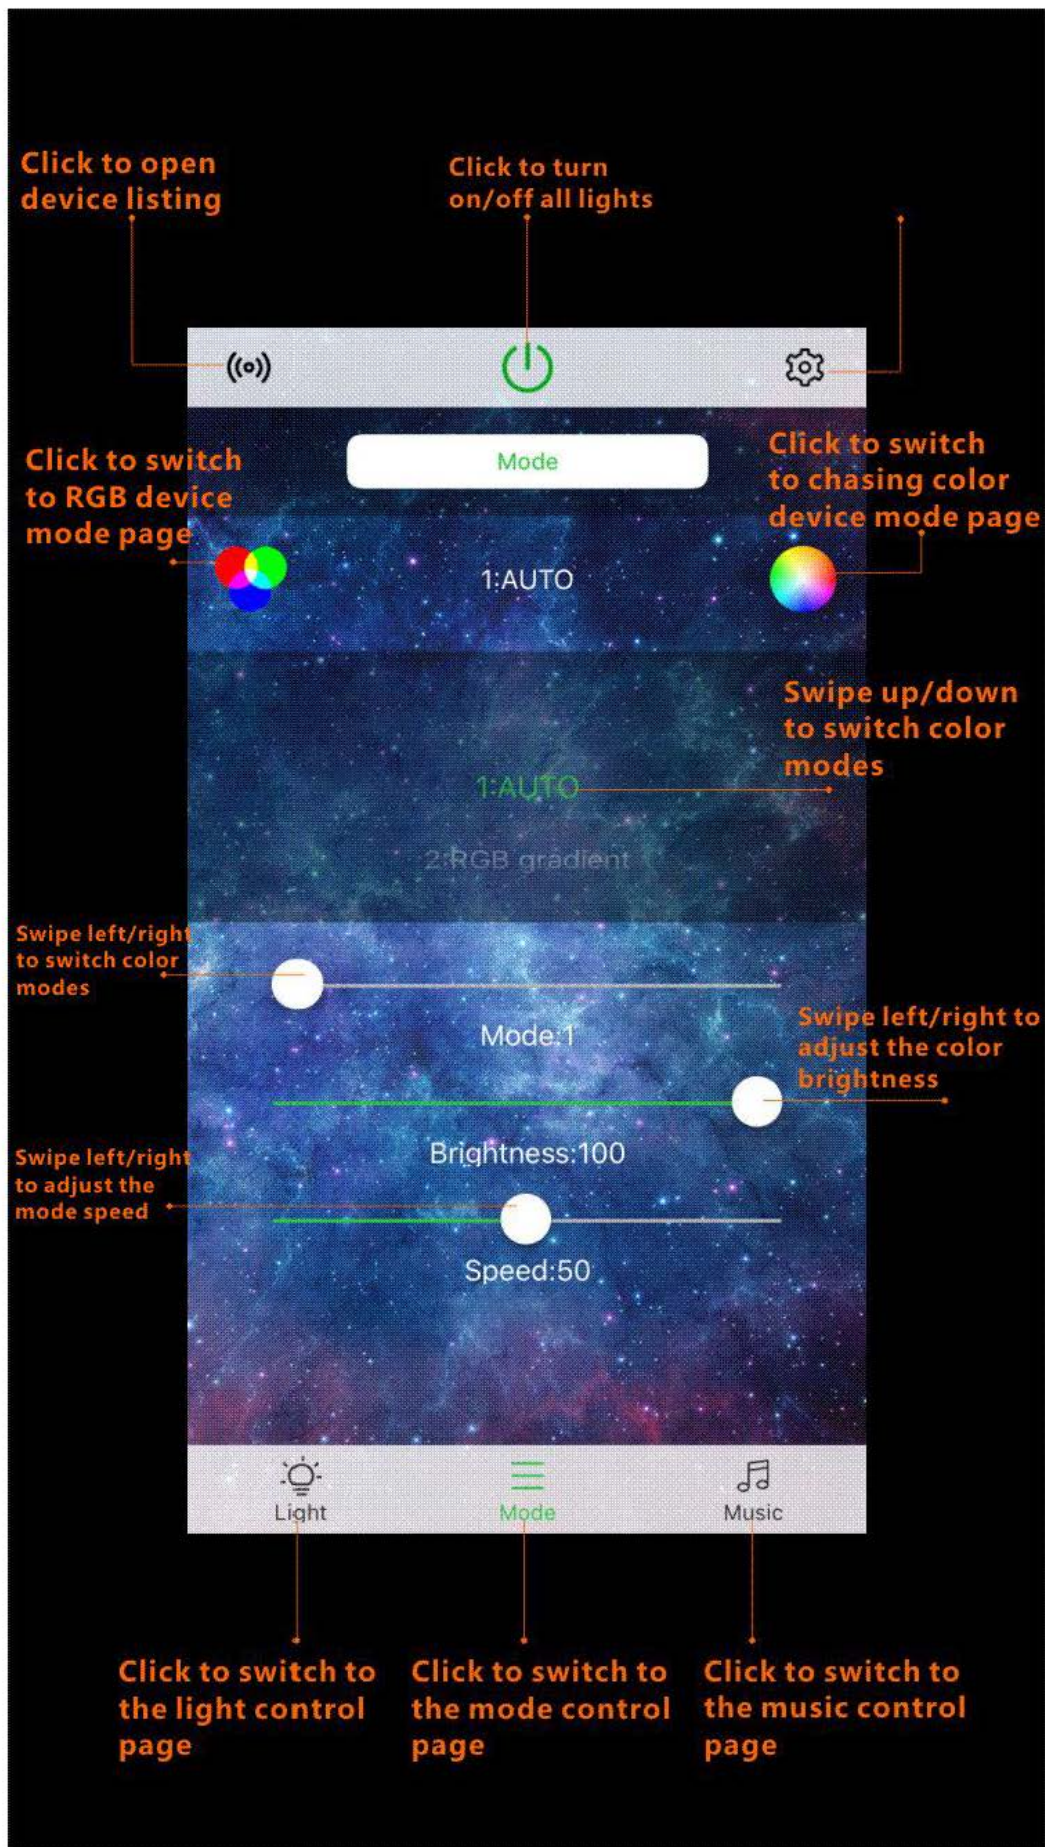


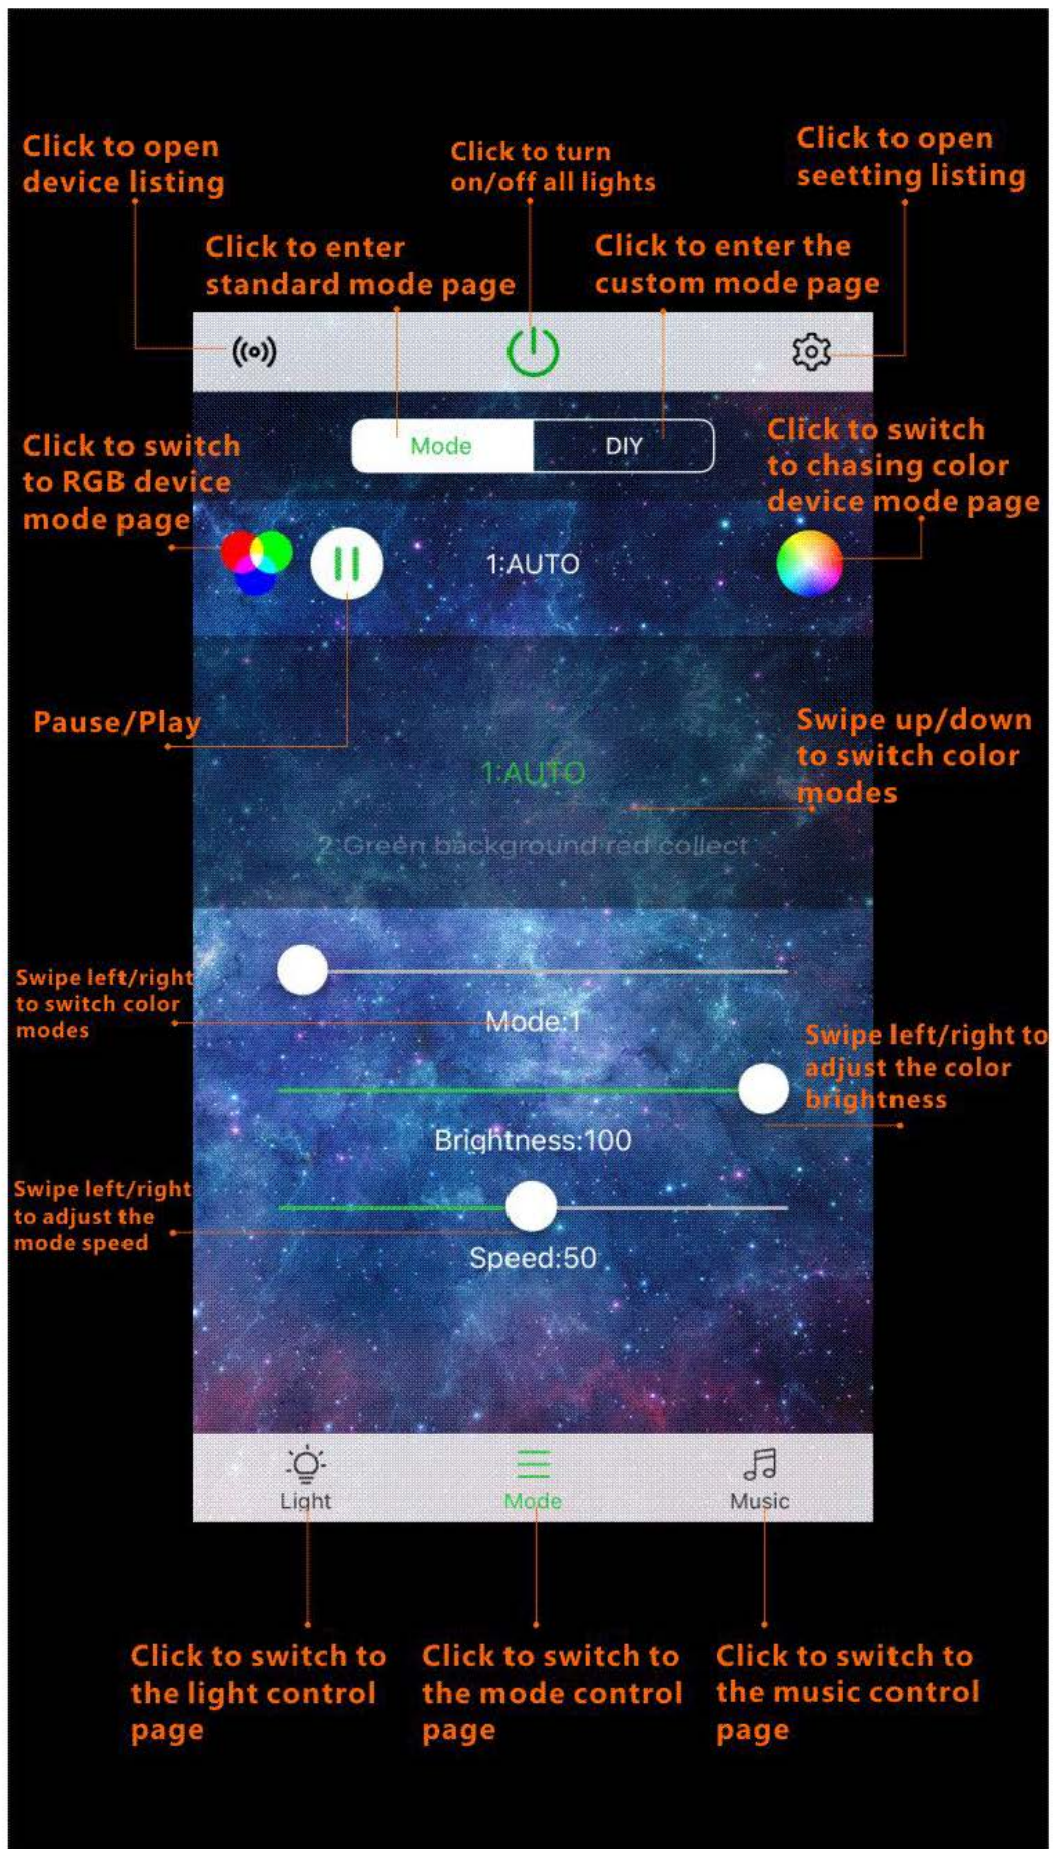


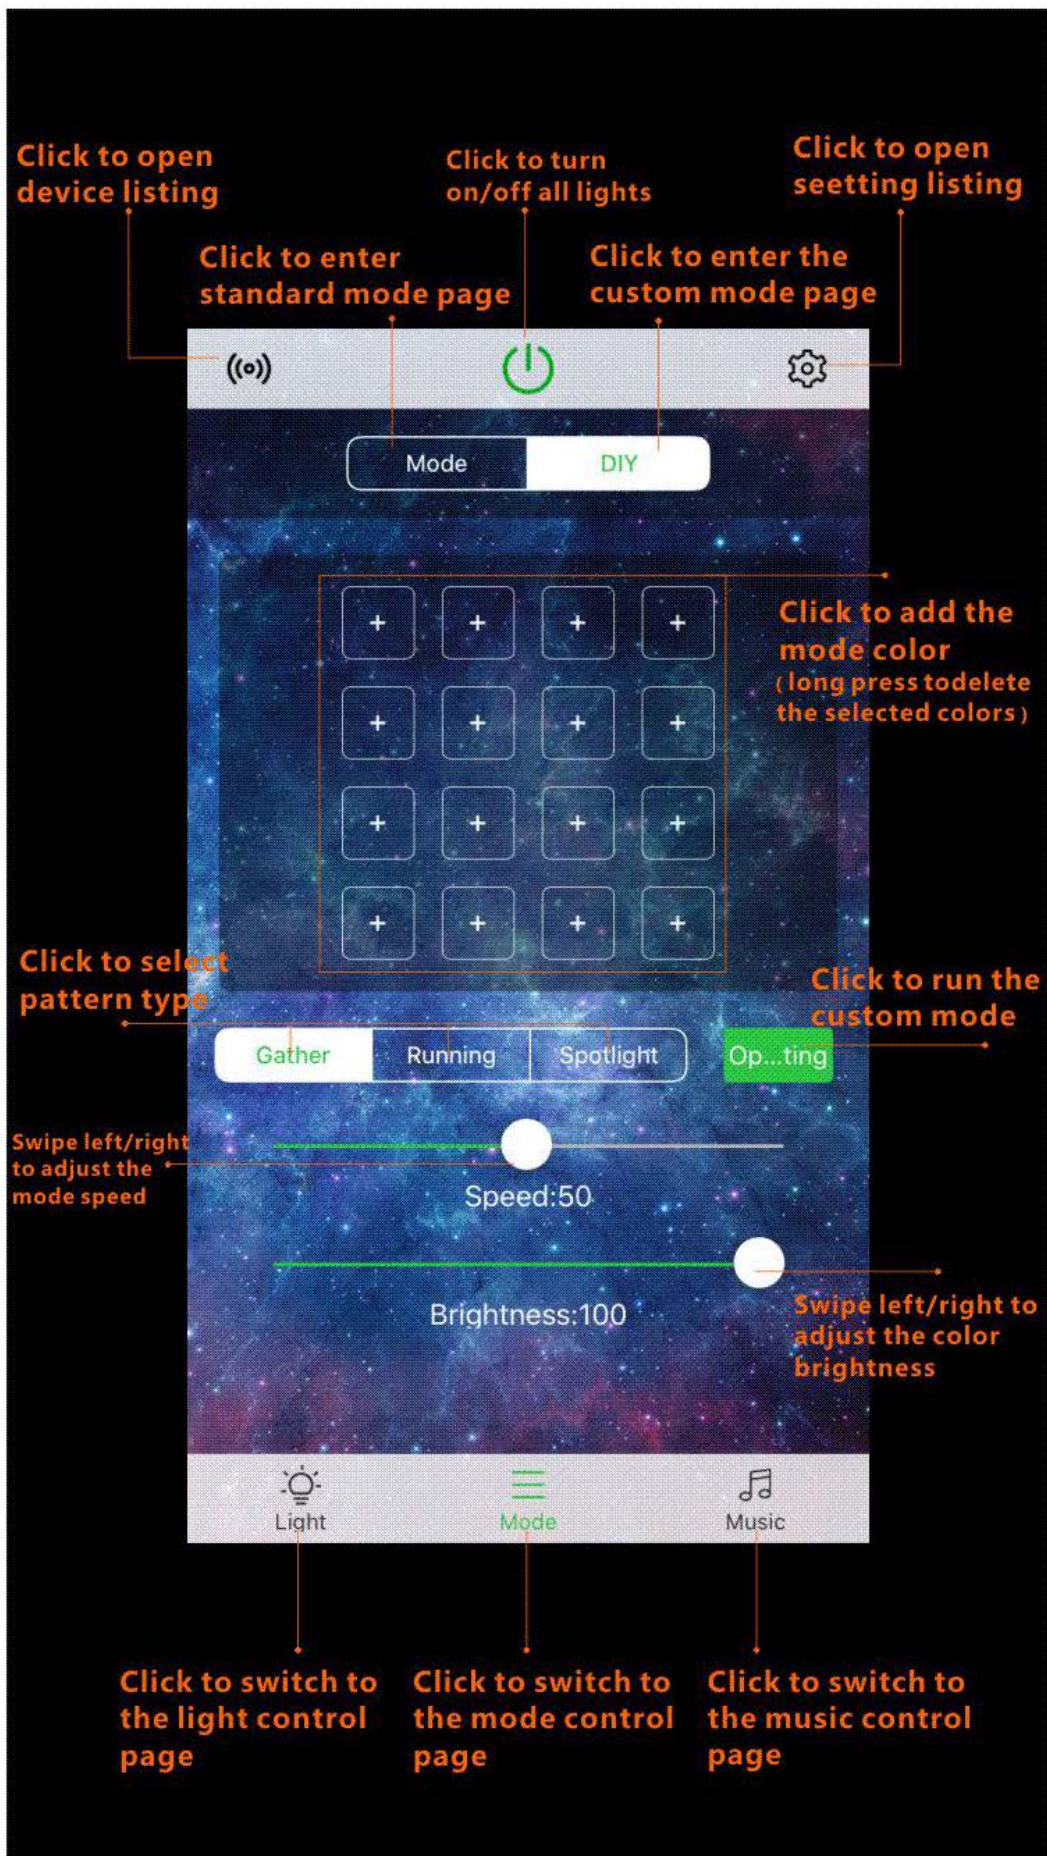

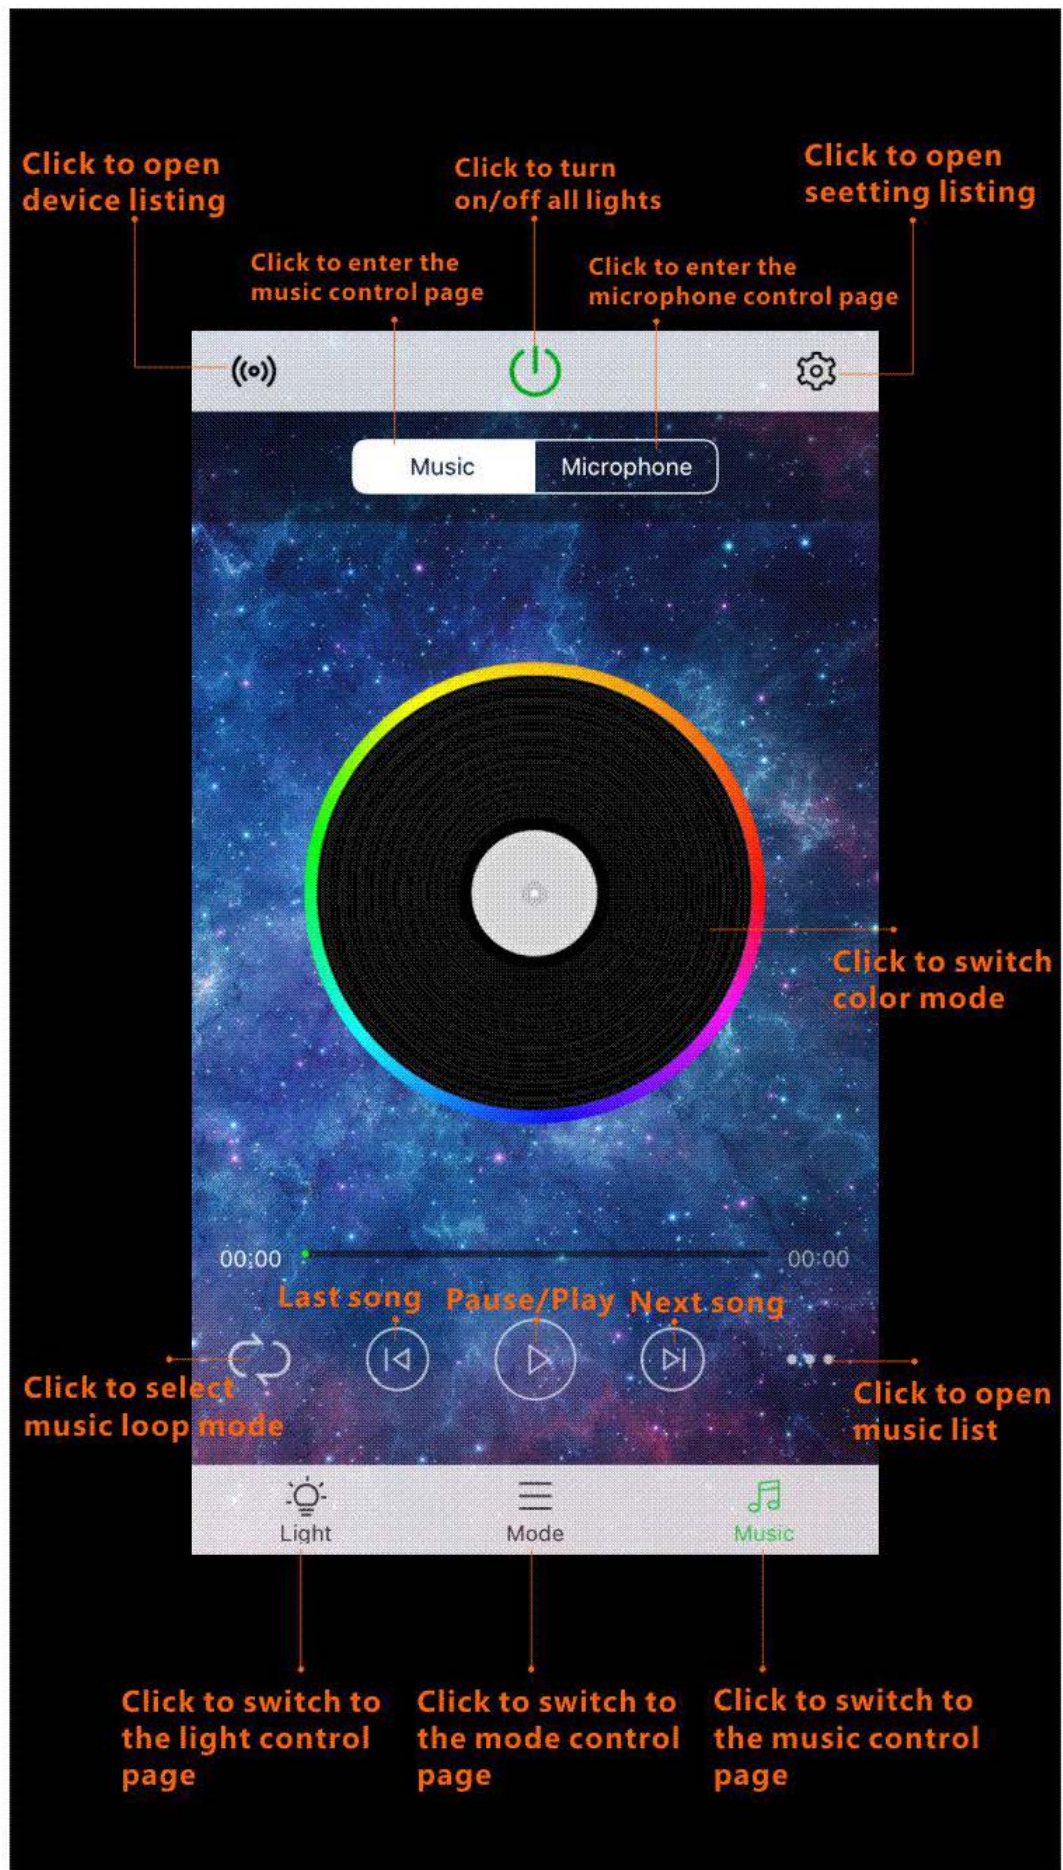

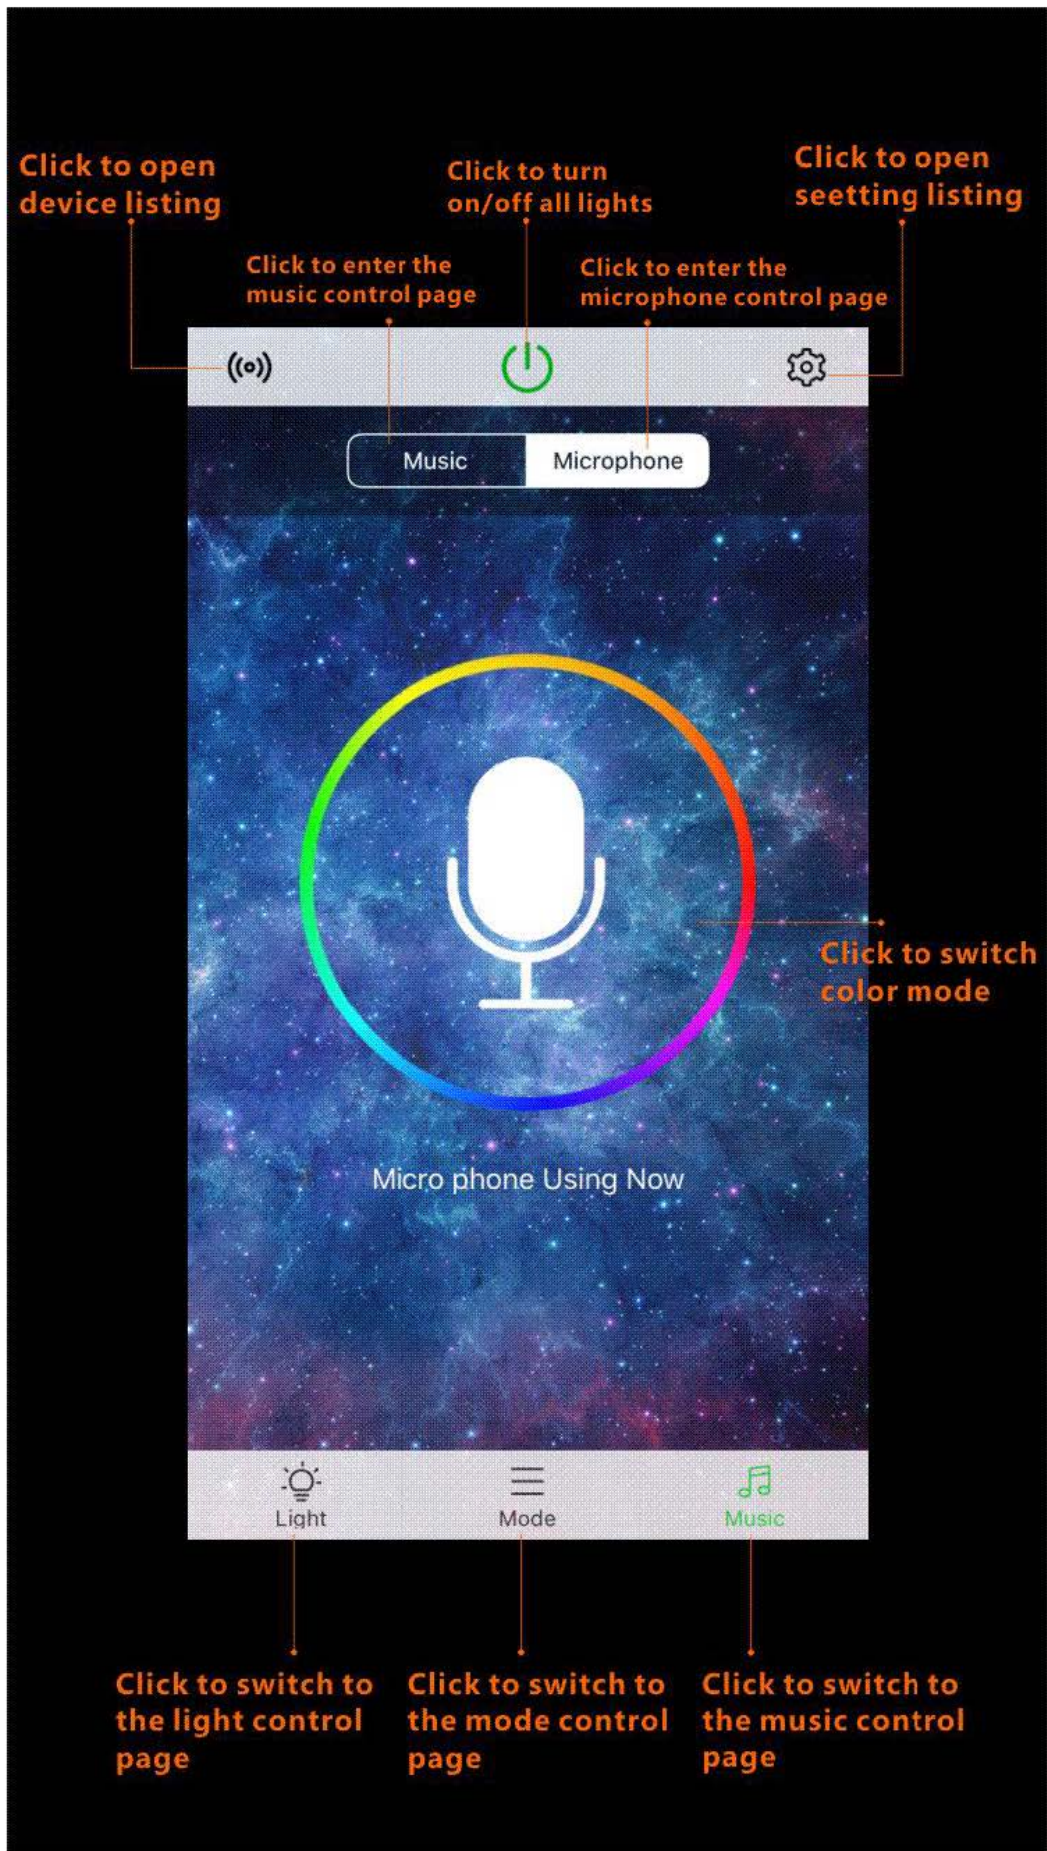

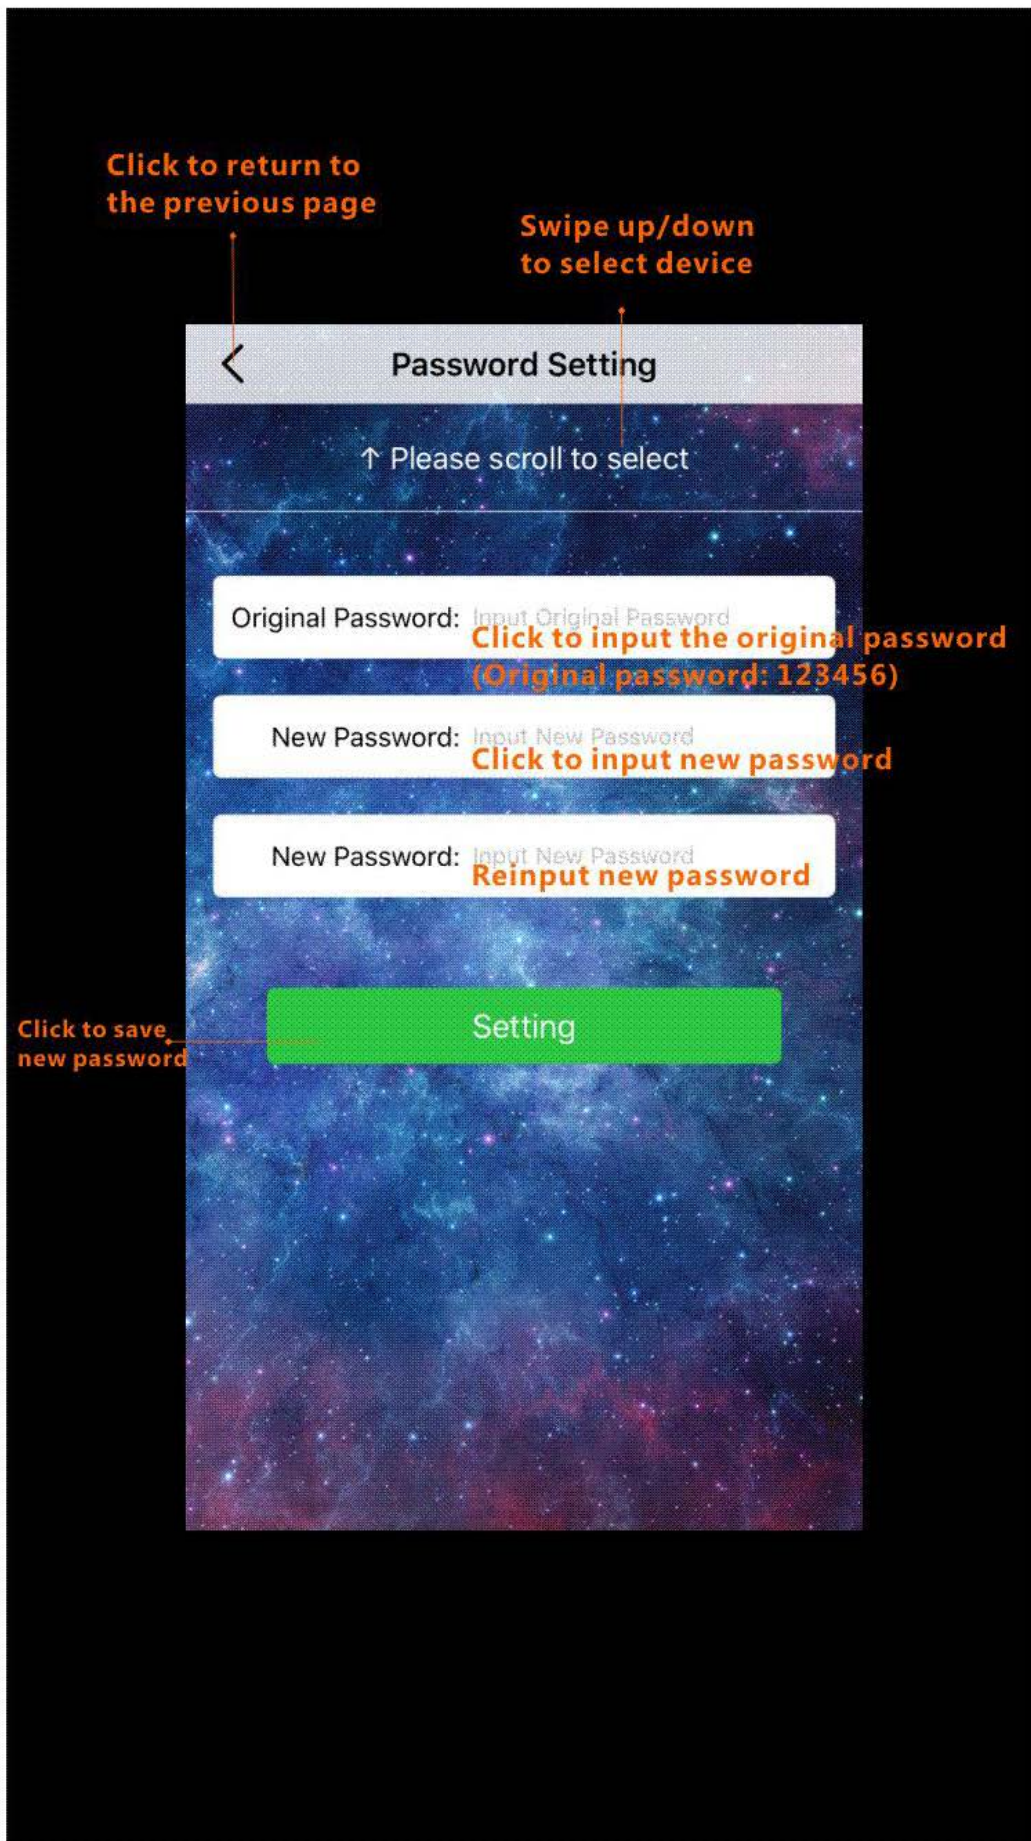

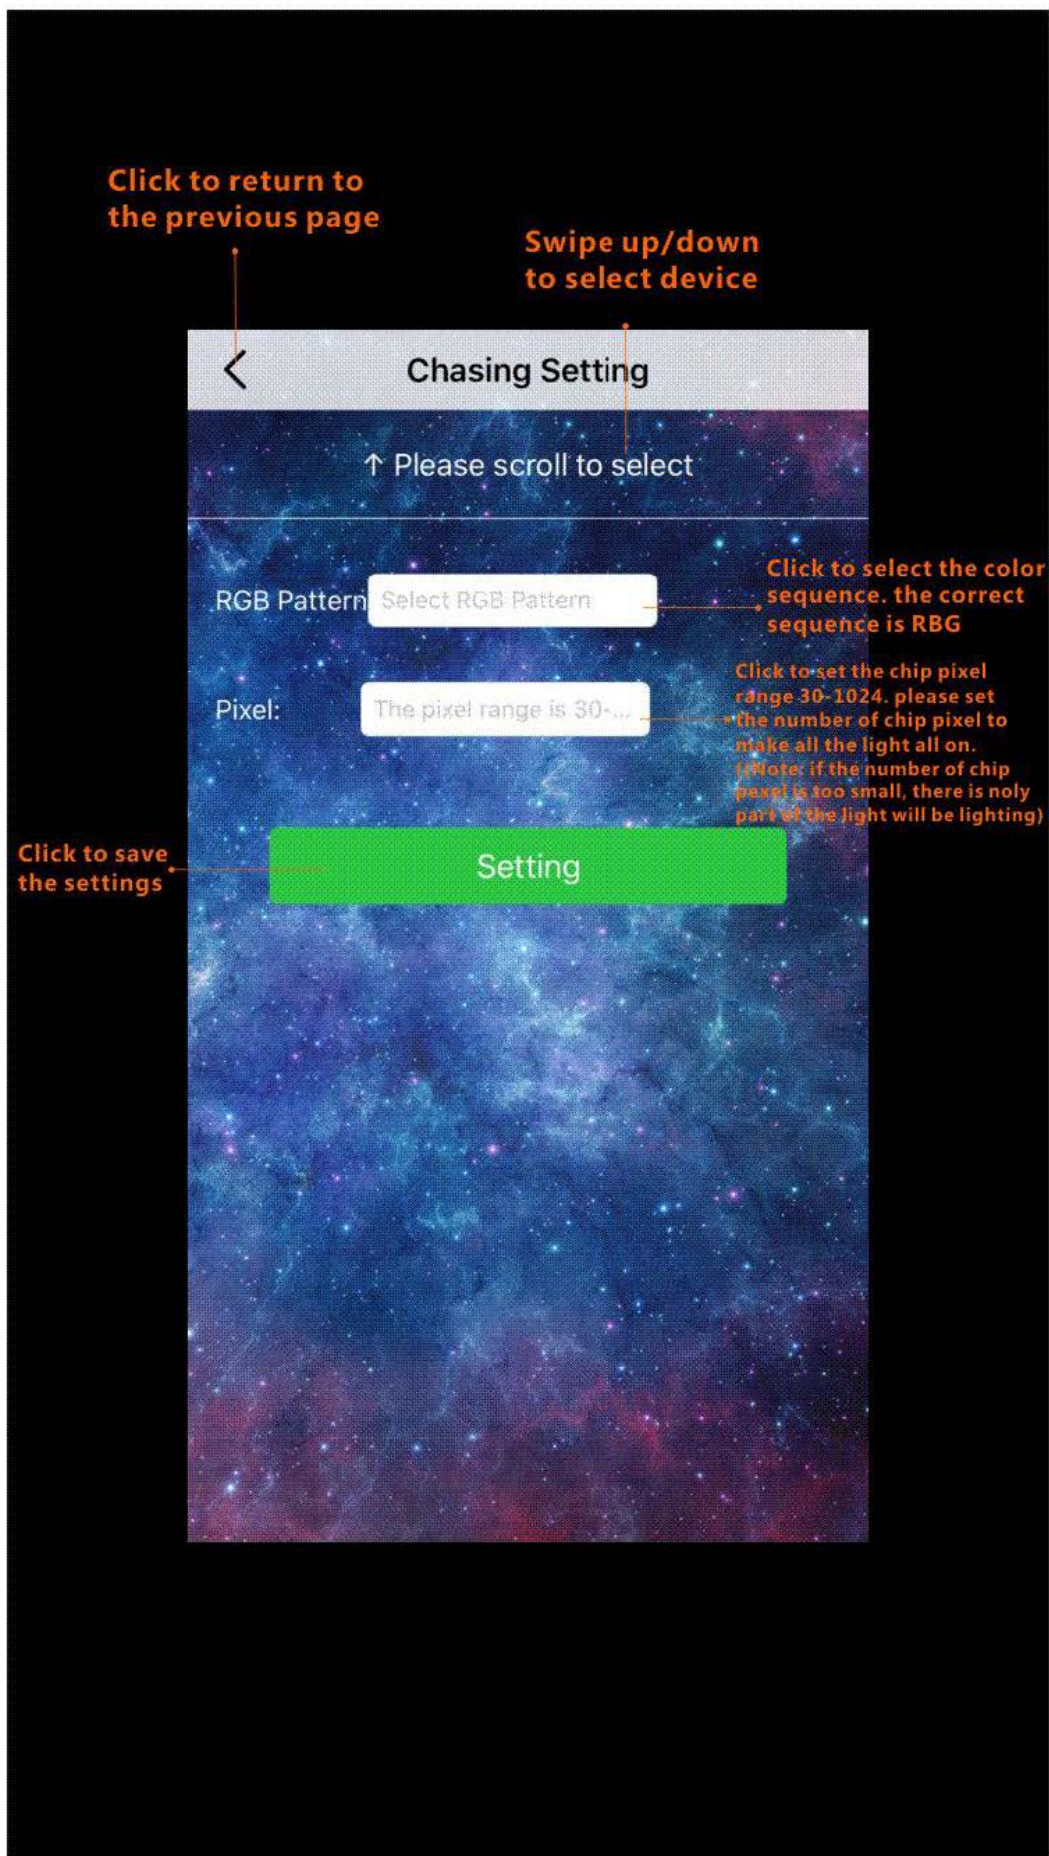

Click to return to
the previous page



APP version information

Click to return to the previous page

Swipe up/down to select device

The screenshot shows a mobile application titled "Light Setting" with a dark blue, starry background. At the top, there is a status bar with signal strength, Wi-Fi, and battery icons, and a time of 21:46. Below the status bar is a navigation bar with a back arrow on the left and the title "Light Setting" in the center. A scroll indicator "↑ Please scroll to select" is positioned above the main content area. The main content area contains four settings, each with a label and a selection box: "Device Name: Input Device Name", "Device Location: Select Installation Pos...", "Turning: Select Mode", and "Brake: Select Mode". At the bottom, there is a large green button labeled "setting".

Device Name: Input Device Name

Device Location: Select Installation Pos...

Turning: Select Mode

Brake: Select Mode

setting

Click to customize device name

Click to select the device location
(Synchronize color between the control light with the external device)

Click to choose the turning light color
(amber / red)

click to choose the braking light mode
(steady red / slow flash red / blasting flash red)

Click to save settings

